



INSTRUCTION MANUAL



POLARIS RANGER PLUG & PLAY AUTOMATIC UTV TRUNK BED LIGHT KIT

Part #: 64-108 / 64-108R

Fitment: POLARIS RANGER 2017+

TOOLS NEEDED:



Side Cutter Pliers



Heat Gun/ Lighter



Push Pin Pliers



Pin T-30 Torx



T-40 Torx



12mm Wrench



Small Flathead Screwdriver



5/16" Drill Bit



Drill



Ratchet



10mm Socket

PARTS INCLUDED:

- UTV Trunk Bed Light (4x)
- Power Harness (1x)
- Extension Harness (2x)
- Dielectric Grease (1x)
- Adhesive Promotor Wipe (4x)

- Rubbing Alcohol Wipe (4x)
- Heat Shrink (1x)
- Wire Tie (8x)
- Rocker Switch Adapter (1x)

INSTALL VIDEO TUTORIAL

DON'T LIKE INSTRUCTIONS? VISIT OUR WEBSITE TO ACCESS THE VIDEO TUTORIAL.



NOTE: Throughout this process, be sure to keep track of any screws or fasteners you remove as they will be re-installed in the same location.

NOTE: Make sure your vehicle is off and key is out of the ignition before starting.

NOTE: Dielectric grease is provided, and you can use it for added protection.


1


PREP THE VEHICLE


LIFT SEAT UP REMOVE UNDERSEAT TRAY DISCONNECT NEGATIVE FIRST DISCONNECT POSITIVE NEXT



Access your Ranger's battery and disconnect the negative terminal first, then the positive.

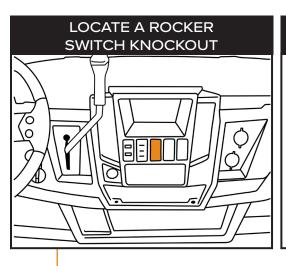


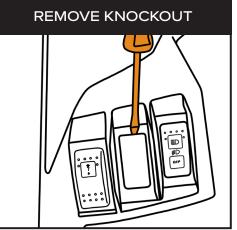


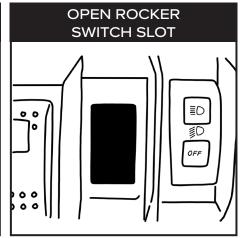




Find an open rocker switch knockout on the UTV dashboard. Use a flathead screwdriver to carefully remove it.

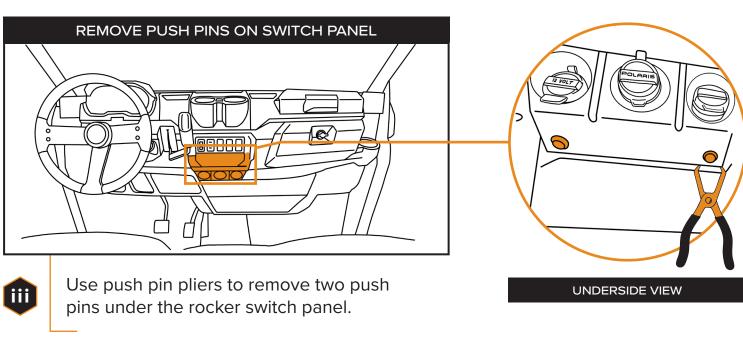

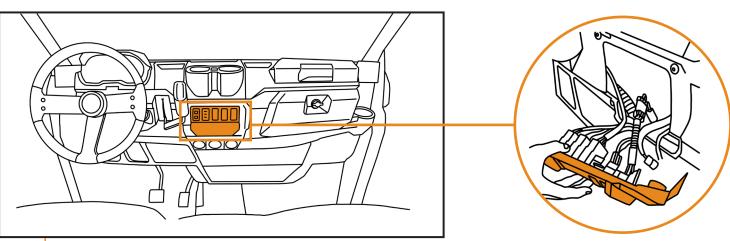




Open the panel and let it rest without unplugging any switches.

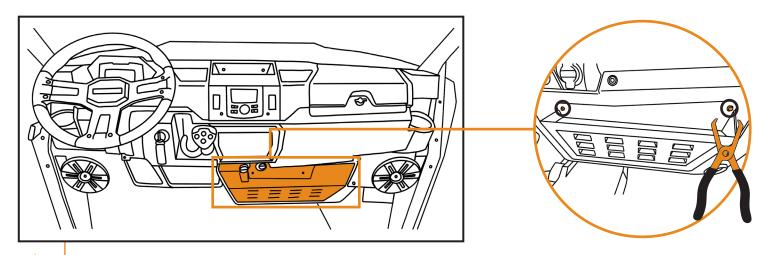


V


Use push pin pliers to remove two push pins from the lower dash panel.

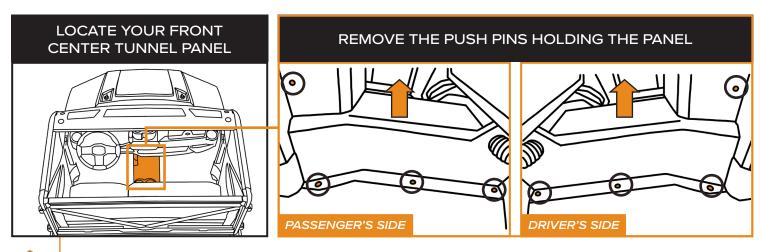


vi

Remove the eight visible push pins holding the front center tunnel panel.

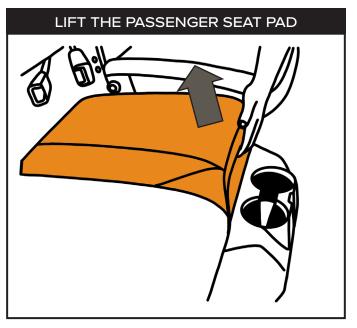


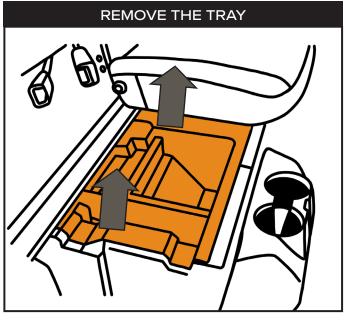

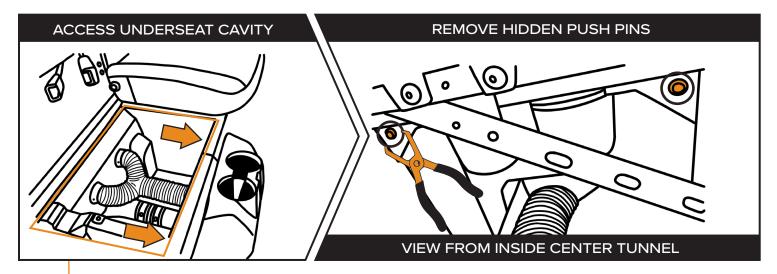





Lift the passenger seat and remove the tray to reveal the two hidden push pins that secure the front center console panel.

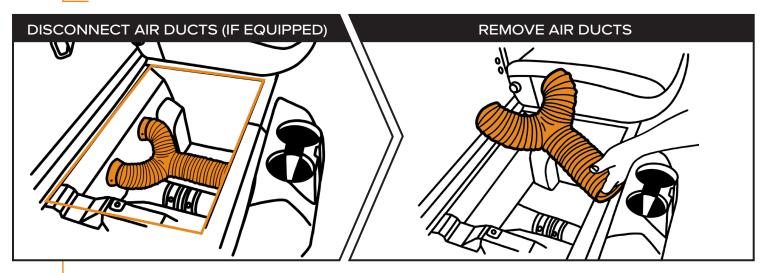



If your Ranger has HVAC, remove the ducts before taking off the center tunnel panels.

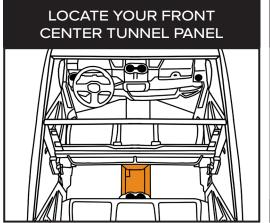


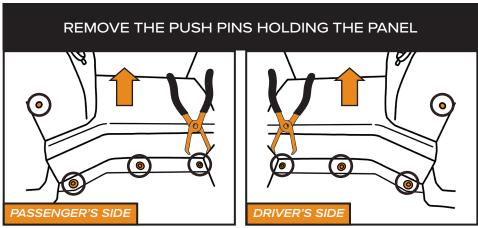




Remove the eight visible push pins securing the rear center tunnel panel, then take off the panel.


REMOVE FASTENERS TO TAKE OFF BED SIDE COVERS

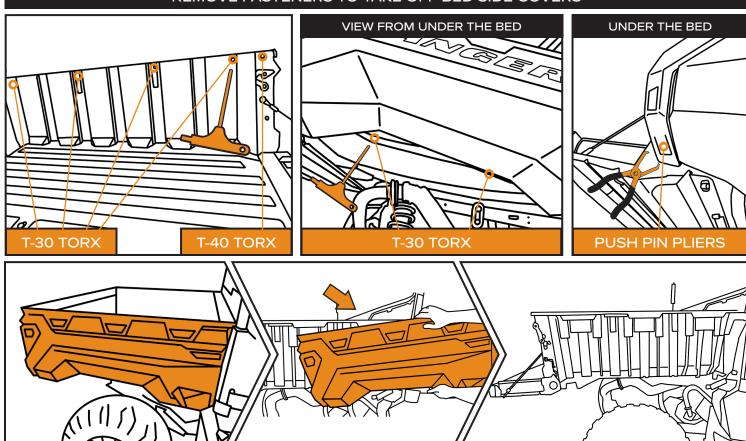



Identify and remove the seven screws and one push pin securing the side covers of your Ranger's bed. Then, remove the side covers.


2 ROUTE WIRING

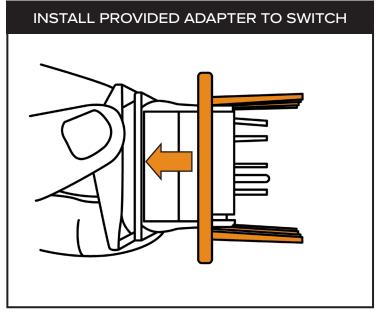

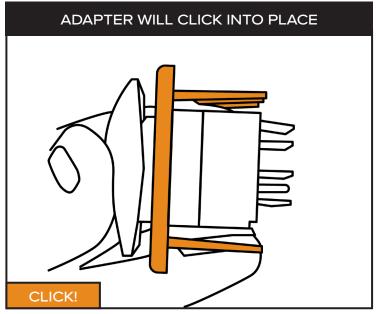

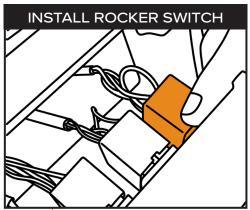

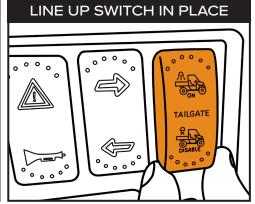

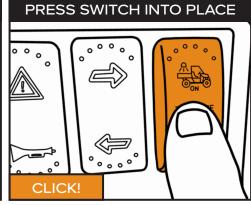




Attach the adapter to the rocker switch, then securely mount it in an available rocker switch slot.






Only route the black and red ring terminals of the power harness to the battery, but don't connect them yet.

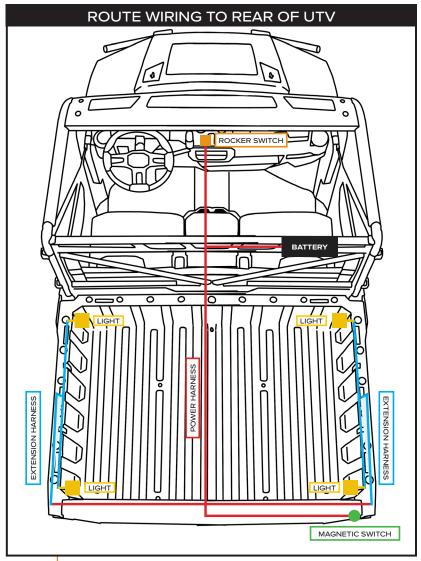




Run all the remaining wiring from the switch through the Ranger's center tunnels to the rear.

MOUNT YOUR LIGHTS

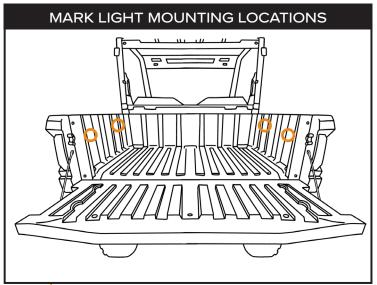

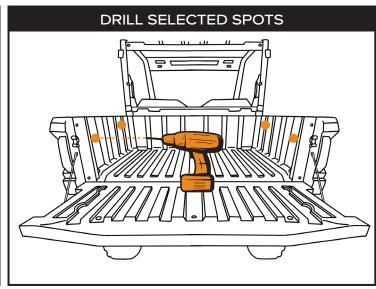


1

Find four flat areas for mounting the lights on your bed. Mark the spots for drilling based on your selected locations. Use a 5/16" drill bit.









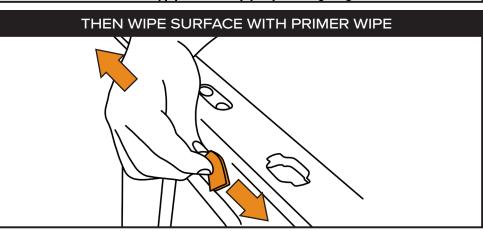


Prep the drilled surfaces with the rubbing alcohol and primer wipes provided.

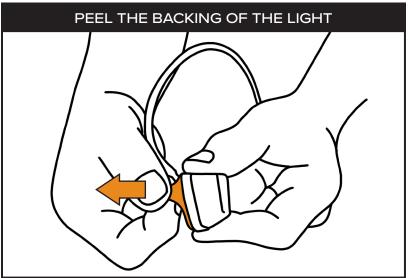


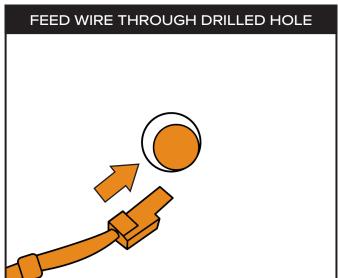



Peel the backing from the double-sided tape on the trunk bed light's base and feed the light's wire through the drilled hole.

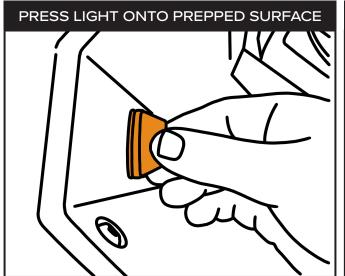


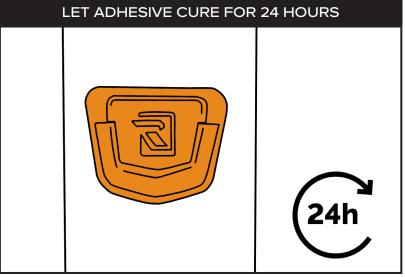




Firmly press the light onto the prepped surface, ensuring full contact, and hold for a few seconds to let the adhesive set.

DRILL & MOUNT YOUR MAGNETIC SENSOR

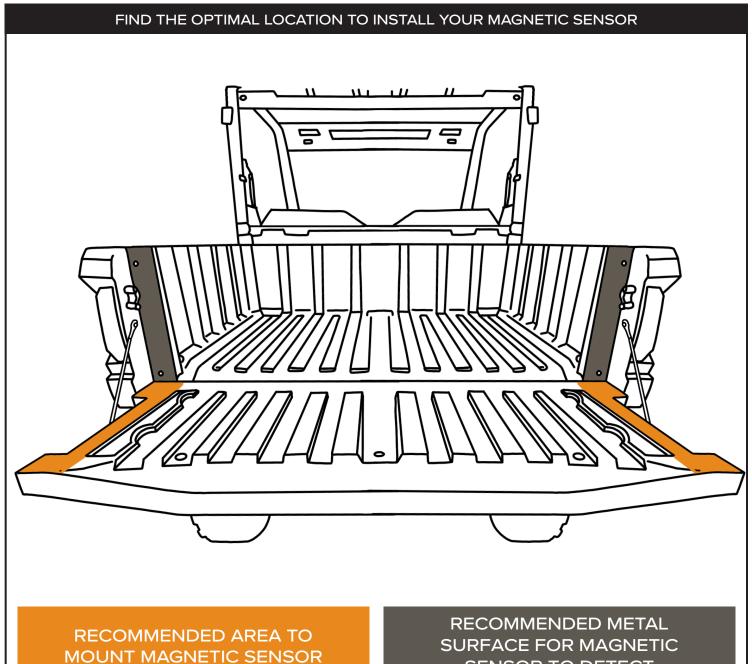


SENSOR TO DETECT

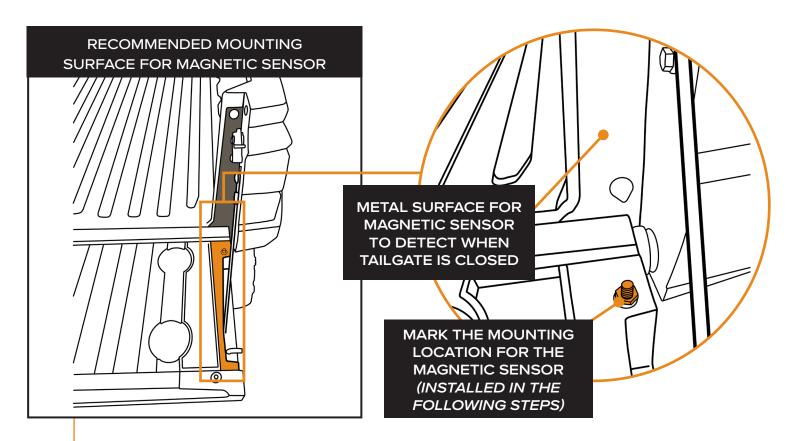



Find a spot on your tailgate where you can securely mount the magnetic sensor.


Ensure the magnetic sensor is close to a metal surface when the tailgate is closed.

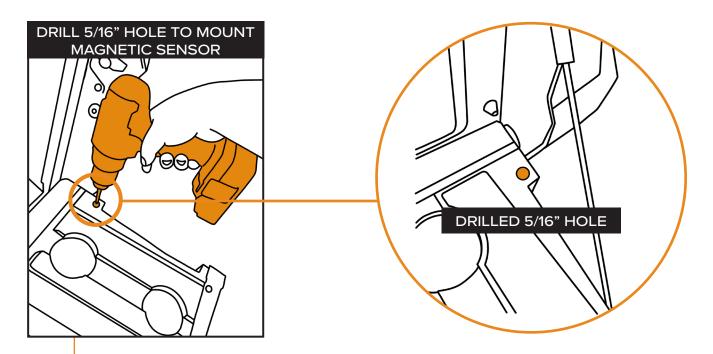



Drill a 5/16" hole at your chosen mounting location for the magnetic sensor.

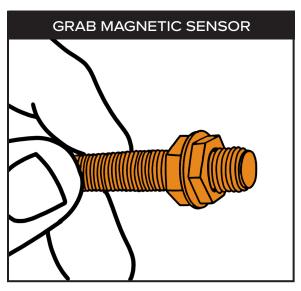


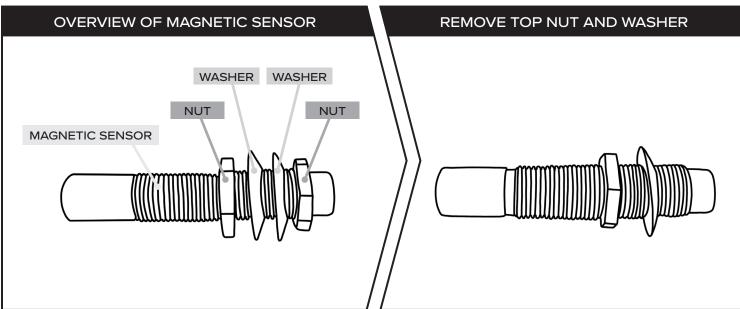


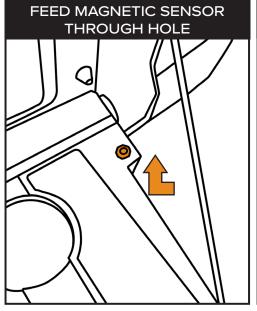

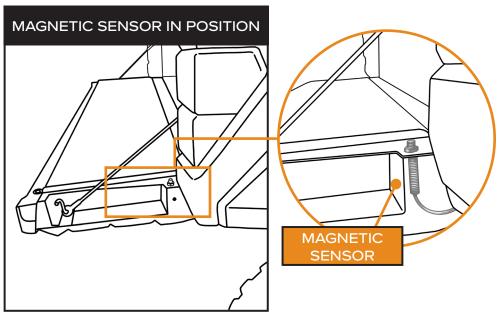

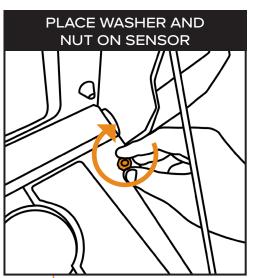

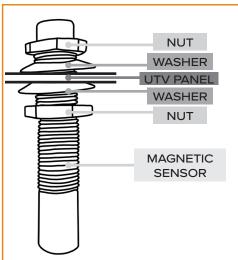

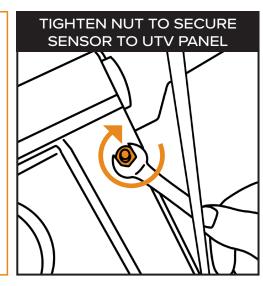

Secure the sensor into the drilled hole and tighten it using a 12mm wrench.

5

POWER ON KIT

 




Make all your harness connections accordingly and reconnect your battery by reversing step 1.i.
[SEE DIAGRAM A & B]

TRUNK BED LIGHT FUNCTIONS

- ON POSITION: Trunk lights stay on.
- **TAILGATE POSITION:** Trunk lights will only turn on when the tailgate is open.
- **DISABLE POSITION:** Trunk lights stay off.



ii

With your battery now connected test all the kit's features.



WHY RAVEK

Stock UTVs don't come with enough storage, lighting, comfort, and protection. That's why we started RAVEK.

We live to design, manufacture, and test innovative SxS upgrades that elevate the riding experience. Here's what you can expect from us:

- Durable products built to last (100% lifetime guarantee)
- UTV upgrades thoughtfully designed & tested by riders
- Outstanding installation support (videos & USA customer service)
- Constant flow of epic riding content (check out our social media)

We're confident your RAVEK product will earn its place on your machine. Please call or e-mail us if we can help.

- Harry & Ricky (Brothers & Owners)

MESSAGE FROM THE DESIGNER

I designed these Trunk Bed lights because I know how difficult it can be to see in the back of your UTV at night. The lights turn on automatically when you open the tailgate, so you don't have to worry about manually turning them on. Please try them out and let us know what you think.

