



RAVEK

UNIVERSAL SECURE-MOUNT SUNGLASSES HOLDER



INSTRUCTION MANUAL



RAVEK


UNIVERSAL SECURE-MOUNT SUNGLASSES HOLDER

Part #: 59-231

Fitment: UNIVERSAL

TOOLS NEEDED:

NONE

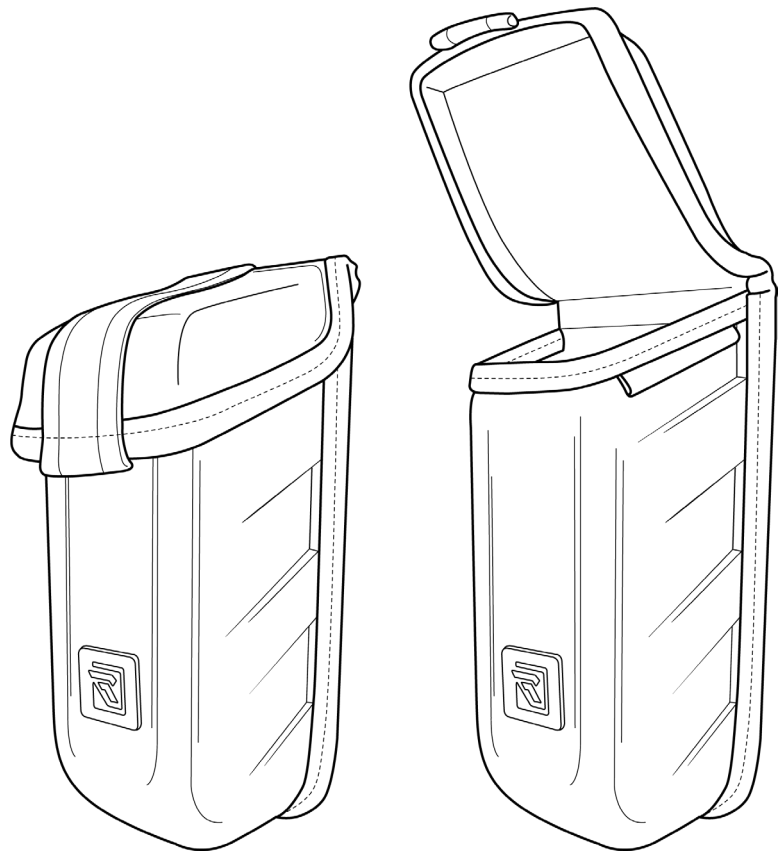

PARTS INCLUDED:

- Sunglasses Holder (1X)
- Strap (2X)
- Hook Strip (1X)
- Adhesive Promoter Wipe (1X)
- Rubbing Alcohol Wipe (1X)
- Sunglasses Cleaning Cloth (1x)

**DON'T LIKE INSTRUCTIONS?
CHECK OUT OUR
VIDEO TUTORIAL**



1

CHOOSE MOUNTING TYPE

There are two options to install this sunglasses holder:
Roll Bar Mounting and Flat Surface Mounting.

- Follow steps A1-A2 for Roll Bar Mounting
- Follow steps B1-B5 for Flat Surface Mounting


A.

ROLL BAR MOUNTING:

1

CHOOSE LOCATION

Locate any roll bar where you would like to mount the sunglasses holder. [SEE DIAGRAM 1A]





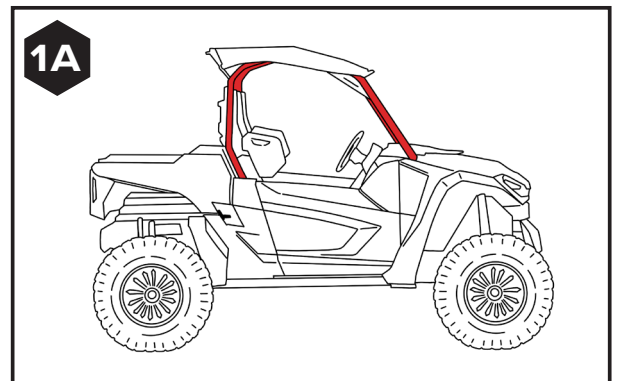


2

SECURE TO ROLL BAR

Securely strap your sunglasses holder around the roll bar. [SEE DIAGRAM 2A – 2C]

Note: If the strap ends have too much slack, rotate d-ring away from the excess strap and retighten down. [SEE DIAGRAM 2D & 2E]

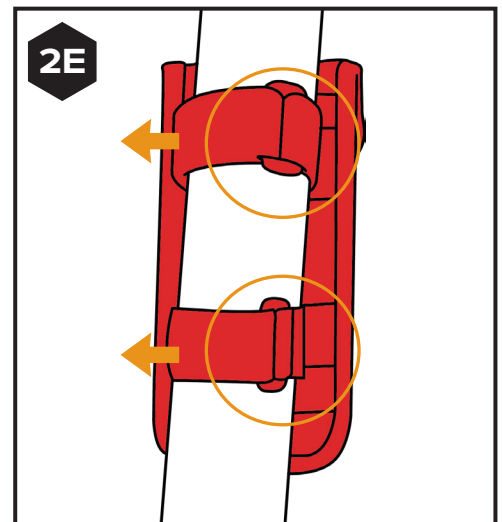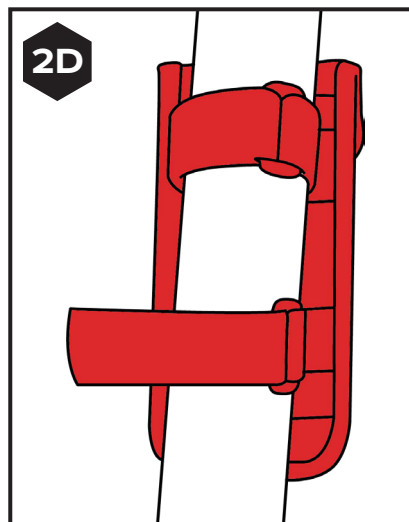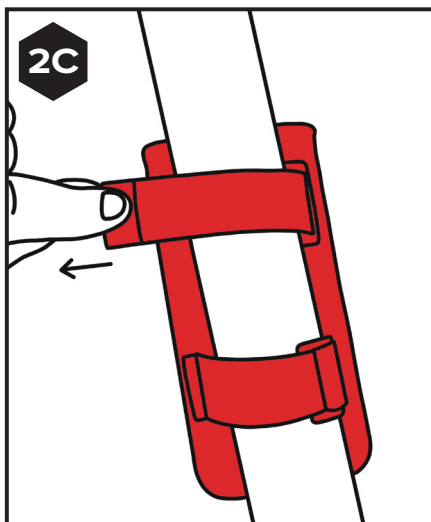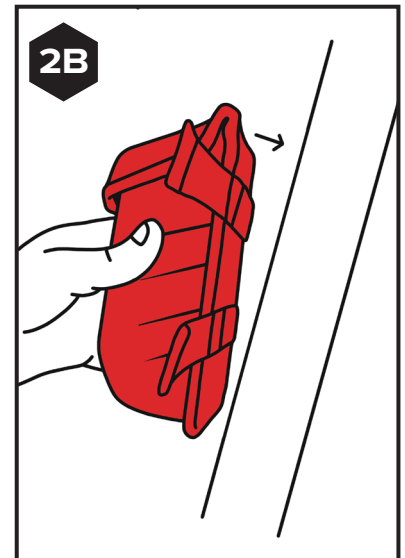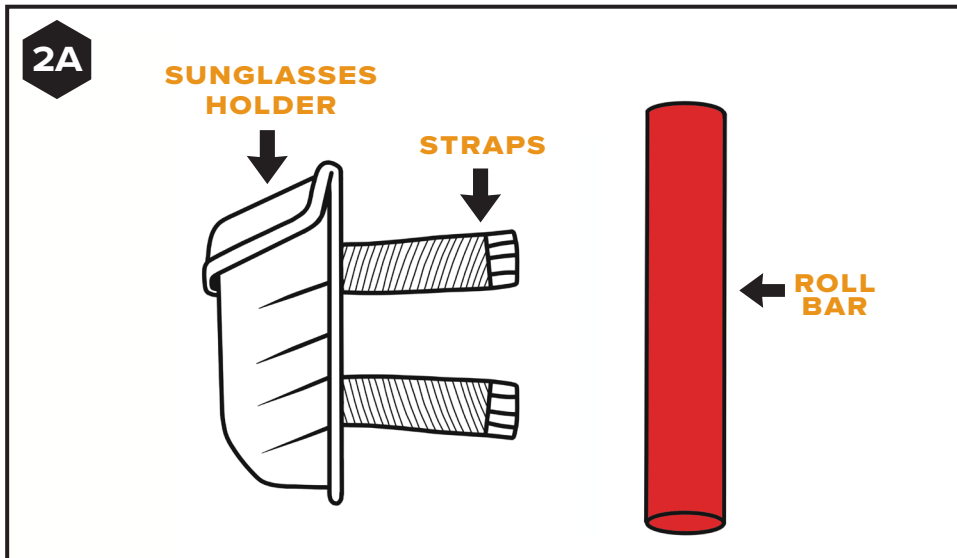


B.

FLAT SURFACE MOUNTING:

1

CHOOSE LOCATION

On your UTV, locate any flat surface where you would like to mount the sunglasses holder. [SEE FIGURE 1A]

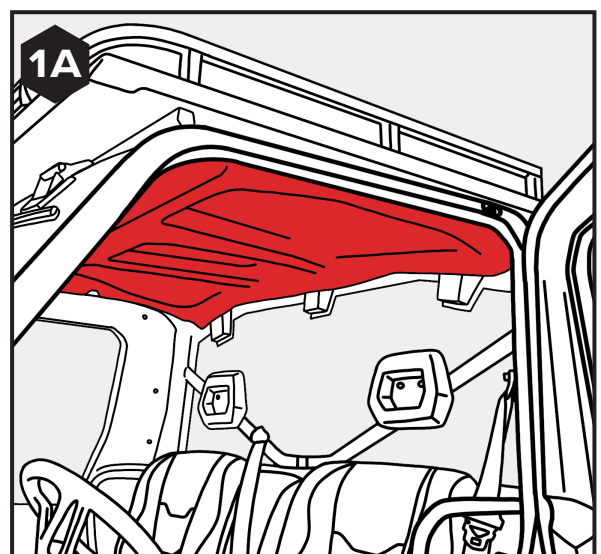

2

PREP THE SURFACE

Before you permanently mount your sunglasses holder, wipe down the flat surface with the rubbing alcohol wipe provided. Let dry.



Next wipe down the surface with the adhesion promotor wipe. Let dry. [SEE FIGURE 2A & 2B]



3

ADHERE BACKING TO SURFACE





Remove the backing of the hook strip and place the adhesive/sticky side onto the flat surface. [SEE FIGURES 3A & 3B]

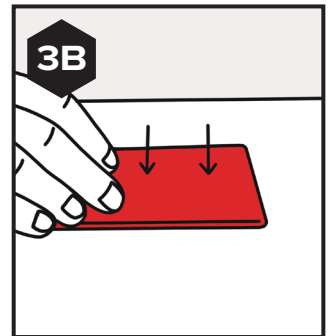
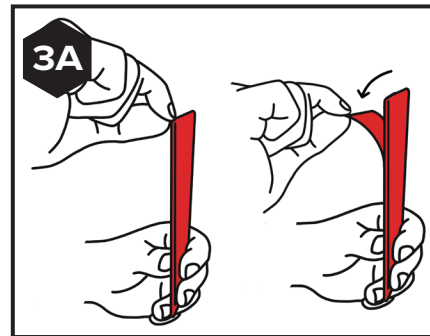


4

REMOVE THE STRAPS & ATTACH HOLDER TO STRIP

Remove the straps from the sunglasses holder and place the sunglasses holder to the hook strip installed. [SEE FIGURES 4A – 4F]

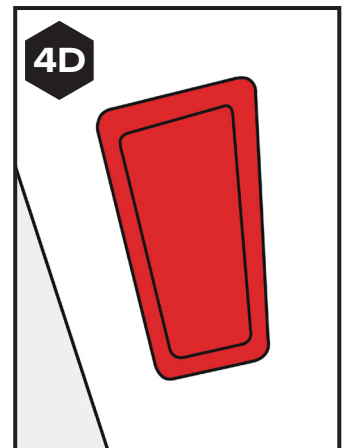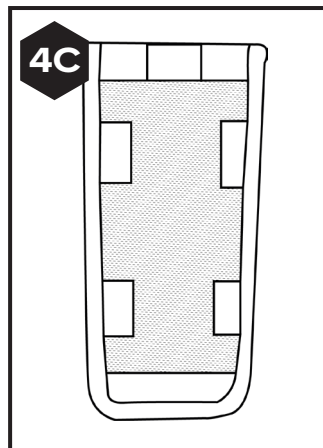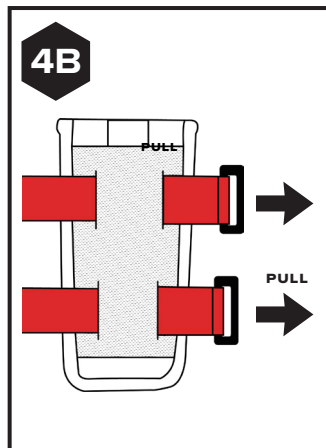
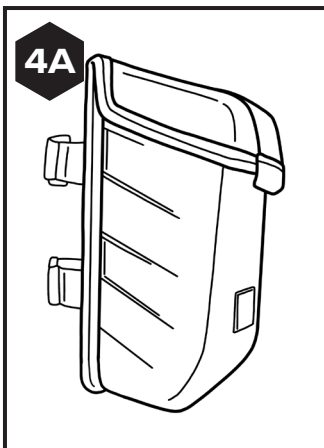


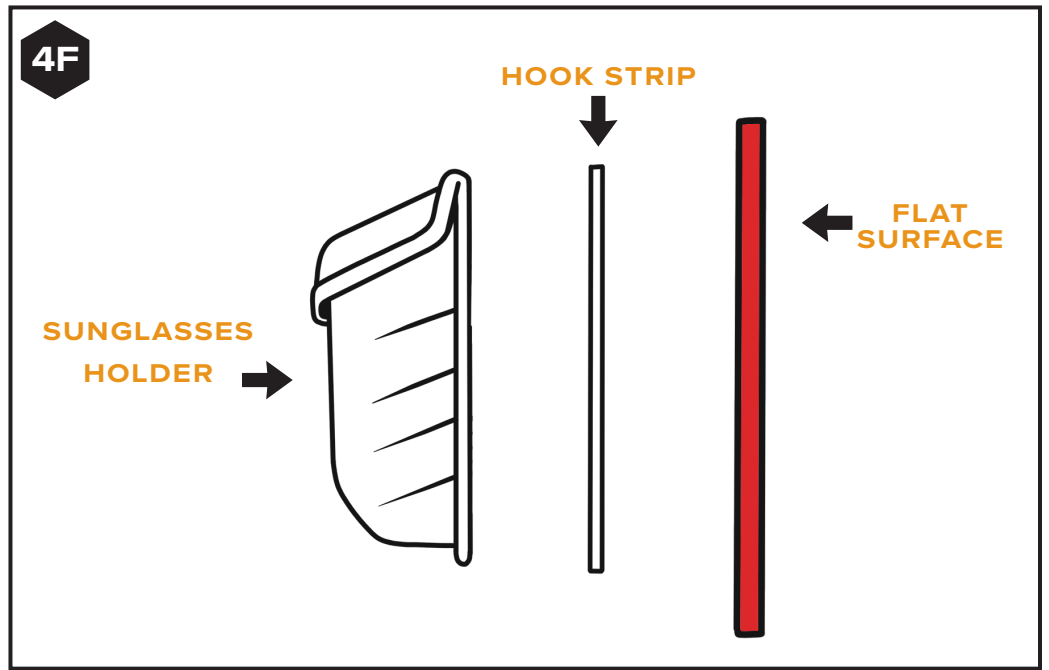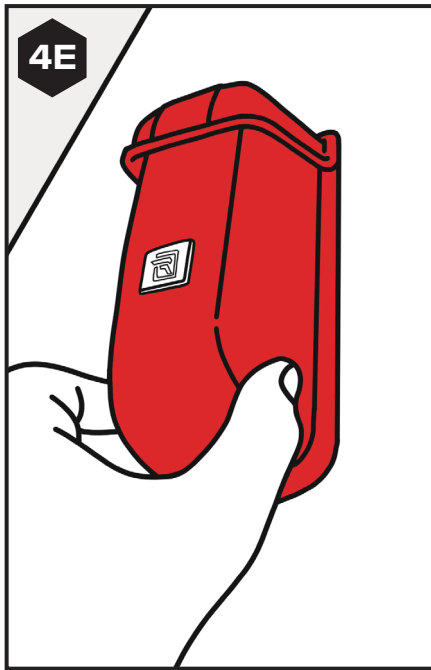

5

LET CURE FOR 24 HRS

We recommend letting the adhesive cure for 24 hours before use. [SEE FIGURES 5A & 5B]

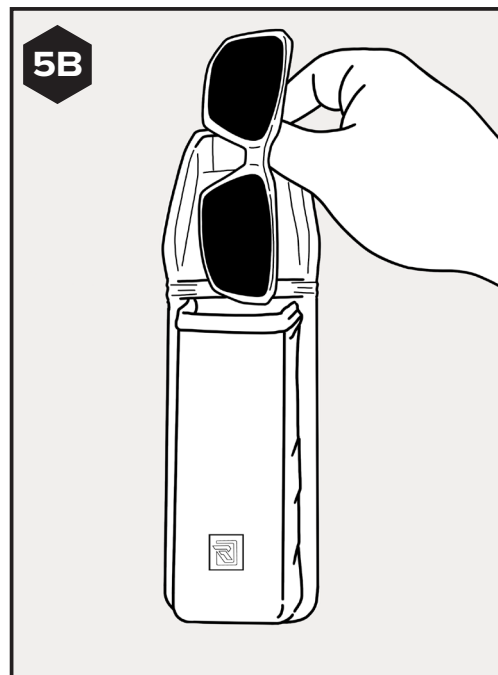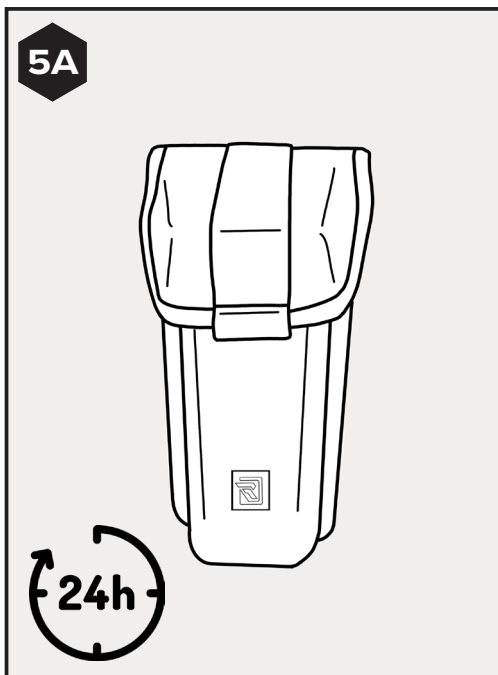



RAVEK

BUILT FOR MORE

WHY RAVEK

Stock UTVs don't come with enough storage, lighting, comfort, and protection. That's why we started RAVEK.

We live to design, manufacture, and test innovative SxS upgrades that elevate the riding experience. Here's what you can expect from us:

- Durable products built to last (100% lifetime guarantee)
- UTV upgrades thoughtfully designed & tested by riders
- Outstanding installation support (videos & USA customer service)
- Constant flow of epic riding content (check out our social media)

We're confident your RAVEK product will earn its place on your machine. Please call or e-mail us if we can help.

- Harry & Ricky (Brothers & Owners)

MESSAGE FROM THE DESIGNER

You should be able to take your 'shades' out on the trail and have them protected. It's honestly crazy to think there hasn't been a place for them before. How many times have you placed your glasses right on a dirty ledge or dash in the vehicle? Not only does it keep your sunglasses safe and clean, but it also might be easier to use than the typical flip-down car options.



RAVEK

BUILT FOR MORE