



RAVEK

POLARIS RZR 2017-2023

ARMRESTS

HEAVY-DUTY ADJUSTABLE




INSTRUCTION MANUAL



RAVEK

POLARIS RZR 2017-2023

ARMRESTS

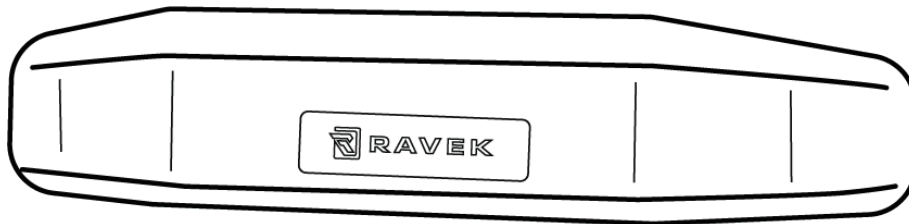

Part #: 64-307

Fitment: POLARIS RZR XP 2017-2023


TOOLS NEEDED:



10mm Wrench



Phillips Screwdriver

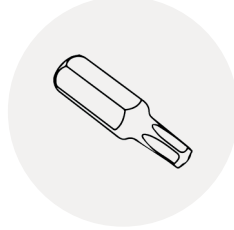

T-25 Torx Driver



4mm Allen Wrench

PARTS INCLUDED:

- L-MOUNT BRACKET (4x)
- ARMREST PAD (2x)
- M6 X 1.0 NYLOCK NUT (4x)
- M6-1.0 X 15MM ALLEN SCREW (4x)
- 1/4-20 X 3/4IN PHILLIPS SCREW (4x)

DON'T LIKE INSTRUCTIONS? CHECK OUT THE VIDEO TUTORIAL




1

REMOVE DOOR PANEL


Starting from the driver's side of the RZR, use a T-25 TORX to remove the six highlighted in the figure below. [SEE FIGURE 1A]
Once the screws are removed, remove the door panel.

NOTE: Depending if you have an aftermarket lower half door, it might be required for you to remove it before jumping to the next step.

NOTE: Depending on your door you might need to detach the latching cable from the door to set the door panel aside.

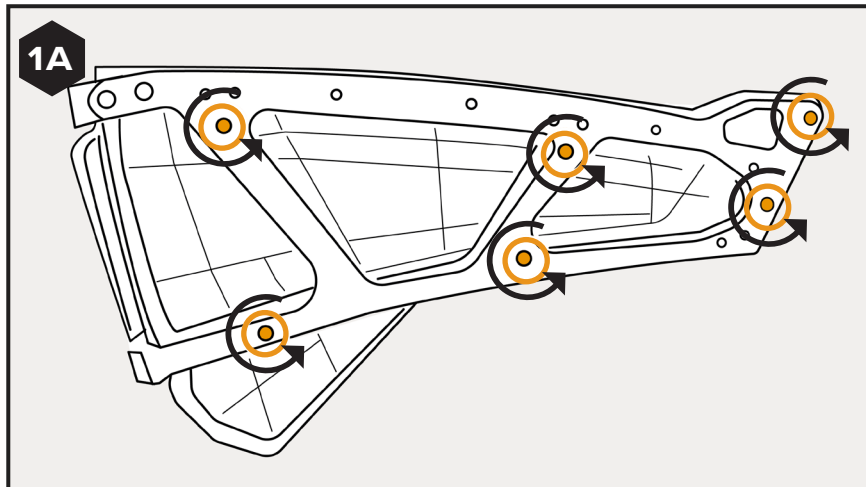

2A

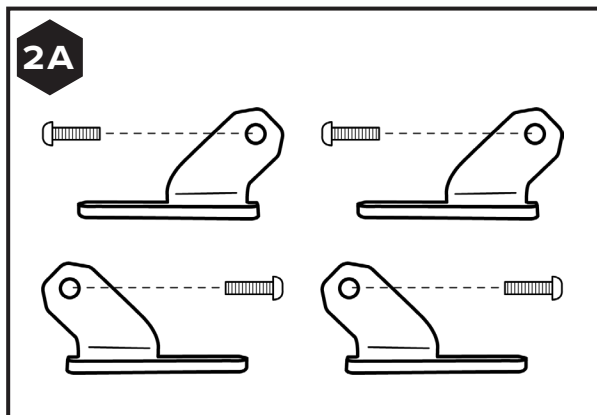

2


INSTALL THE L-MOUNT BRACKETS

A



Identify the L-mount brackets on your kit. [SEE FIGURE 2A]

B

Identify the holes on the door's frame you will be using to mount the L-mount brackets. [SEE FIGURE 2B]

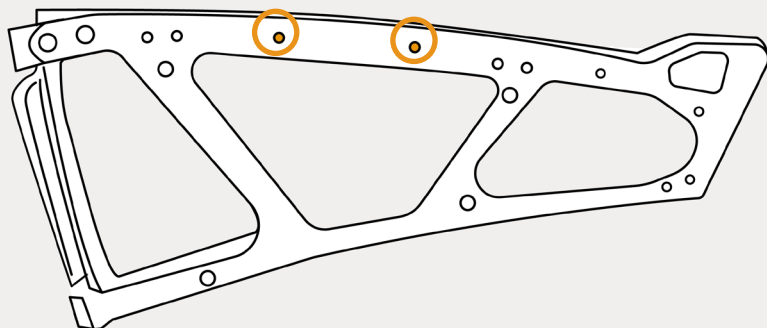2B**C**


Now that you have identified the mounting holes for your armrest. Using a 4MM ALLEN WRENCH and 10MM WRENCH secure the L-mounts to the door's frame with two M6 X 1.0 Nylock Nuts and two M6-1.0 X 15MM Allen Screws. [SEE FIGURES 2C & 2D]

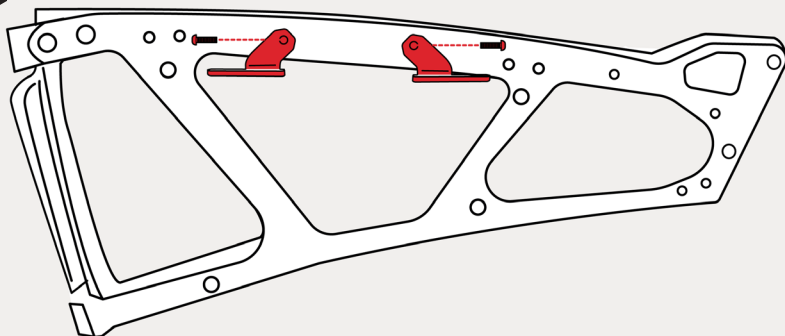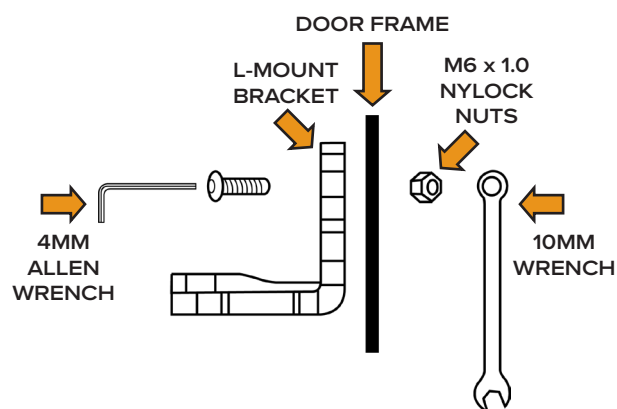2C**2D**

3

INSTALL ARMREST PAD

Using two 1/4-20 X 3/4IN PHILLIPS SCREWS and a Phillips screwdriver, install an armrest pad to the driver's side door frame. [SEE FIGURE 3A]

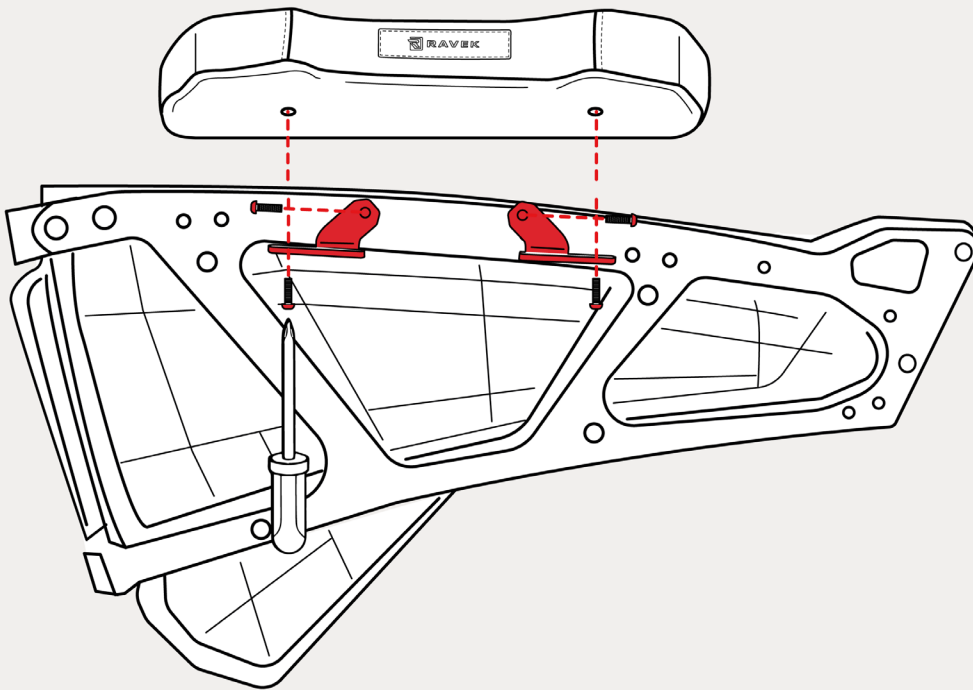3A**4**

REINSTALL DOOR PANEL

With your armrest secured to the door's frame. Reinstall the RZR's door panel by reversing step 1.

NOTE: Do not over-tighten stock OEM hardware on the door panel as it can cause damage.

NOTE: Do not forget to reinstall your door latching cable.

5

WANT STORAGE?

Add RAVEK's Polaris RZR XP 17-23 Armrest Pouches. Each pouch is designed to mount to your new armrest. (RAVEK Part #: H64-301PO)

6

REPEAT STEPS 1 - 4

Repeat steps 1-4 on the right side of the RZR to install an armrest on the passenger side.



RAVEK

BUILT FOR MORE

WHY RAVEK

Stock UTVs don't come with enough storage, lighting, comfort, and protection. That's why we started RAVEK.

We live to design, manufacture, and test innovative SxS upgrades that elevate the riding experience. Here's what you can expect from us:

- Durable products built to last (100% lifetime guarantee)
- UTV upgrades thoughtfully designed & tested by riders
- Outstanding installation support (videos & USA customer service)
- Constant flow of epic riding content (check out our social media)

We're confident your RAVEK product will earn its place on your machine. Please call or e-mail us if we can help.

- Harry & Ricky (Brothers & Owners)

MESSAGE FROM THE DESIGNER

From the initial design phase, we knew these armrests had to be extremely durable and, of course, seriously comfortable.

After extensive design, engineering, prototyping, and aggressive field testing, these armrests came out just the way I'd hoped.

They're 100% waterproof, have 350 lbs. of load-bearing capacity, and they're filled with premium memory-foam padding. I love riding with them and expect you and your crew will too.



RAVEK

BUILT FOR MORE