



RAVEK

**CAN-AM MAVERICK X3
PLUG & PLAY AUTO-
CANCEL UTV TURN SIGNAL KIT**

WITH WHITE RUNNING LIGHTS



INSTRUCTION MANUAL



RAVEK

CAN-AM MAVERICK X3

***PLUG & PLAY AUTO-
CANCEL UTV TURN SIGNAL KIT***

WITH WHITE RUNNING LIGHTS


Part #: 65-302

Fitment: CAN-AM MAVERICK X3


PARTS INCLUDED:

- Turn Signal Controller (1x)
- Switchback Apex Light (2x)
- Taillight Harness (2x)
- Power Harness (1x)
- Horn (1x)
- Turn Signal Rocker Switch (1x)
- Horn/Hazards Rocker Switch (1x)
- Turn Signal Rocker Switch Extension Harness (1x)
- Horn/Hazards Rocker Switch Extension Harness (1x)
- Right Taillight Extension Harness (1x)
- Left Taillight Extension Harness (1x)
- Right Turn Signal Extension Harness (1x)
- Left Turn Signal Extension Harness (1x)
- License Plate Extension Harness (1x)
- Right Dash Indicator Harness (1x)
- Left Dash Indicator Harness (1x)
- Dielectric Grease (1x)
- Heat Shrink (1x)
- Wire Loom (1x)
- Roll Bar Adapter (2x)
- Strap (2x)
- Zip Tie (20x)
- Double Sided Tape (2x)
- M6 Flat Washer (2x)
- M5 x 0.8 x 6mm Allen Screw (4x)
- M6 x 1.0 x 10mm Allen Cap Screw (2x)
- Adhesive Promoter Wipe (3x)
- Rubbing Alcohol Wipe (3x)

TOOLS NEEDED: **OPTIONAL*

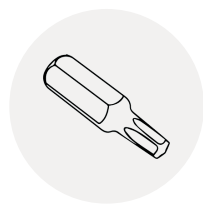

T-30 Torx

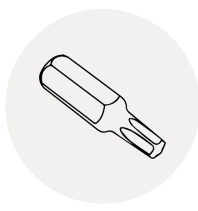


T-20 Torx



Pick



Small Flathead Screwdriver

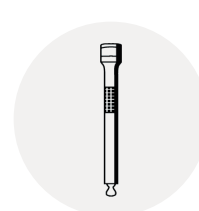


Extension



Push Pin Pliers




10mm Deep Well Socket

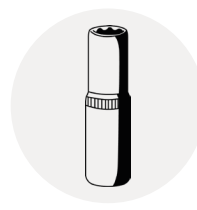

13mm Socket




18mm Socket

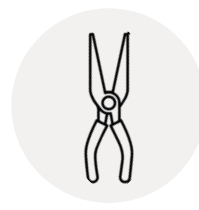


Needle Nose Pliers




Ratchet

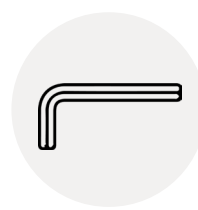

3mm Allen Wrench

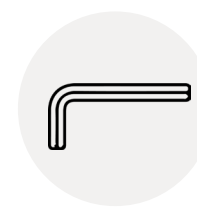


4mm Allen Wrench

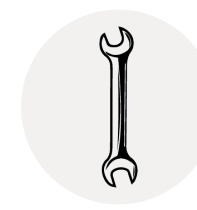


13mm Wrench



Lighter / Heat Gun

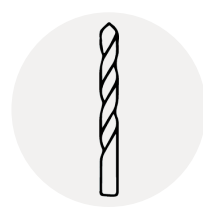

*11/32" drill bit**

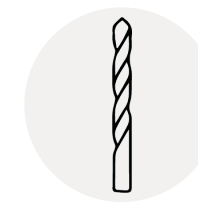

*1/4" drill bit**



*Drill**



*Wire Fish**

INSTALL VIDEO TUTORIAL

**DON'T LIKE INSTRUCTIONS?
VISIT OUR WEBSITE
TO ACCESS THE
VIDEO TUTORIAL.**



General Notes:

- Throughout this process, be sure to keep track of any screws or fasteners you remove and reinstall them in the exact location.*
- Dielectric grease is provided, and you may use it for added protection.*


i

REMOVE PASSENGER SEAT

Remove the passenger's seat, following the steps below:



- Remove the two nuts and bolts holding down the front end of the seat using a 13MM WRENCH, RATCHET, and 13MM SOCKET. [SEE FIGURES 1A – 1C]
- Flip the seat pad up to access the nuts holding the seat's rear end down. Use a RATCHET, 6" EXTENSION, and 18MM SOCKET to remove the hardware. [SEE FIGURES 1D - 1G]
- Once the seat's hardware has been removed, remove seat from cabin and set aside. [SEE FIGURE 1H]

NOTE: The seat belt will still be attached to the seat, but there is no need to remove it. Just lay seat on the floor as the seat belt has enough slack.

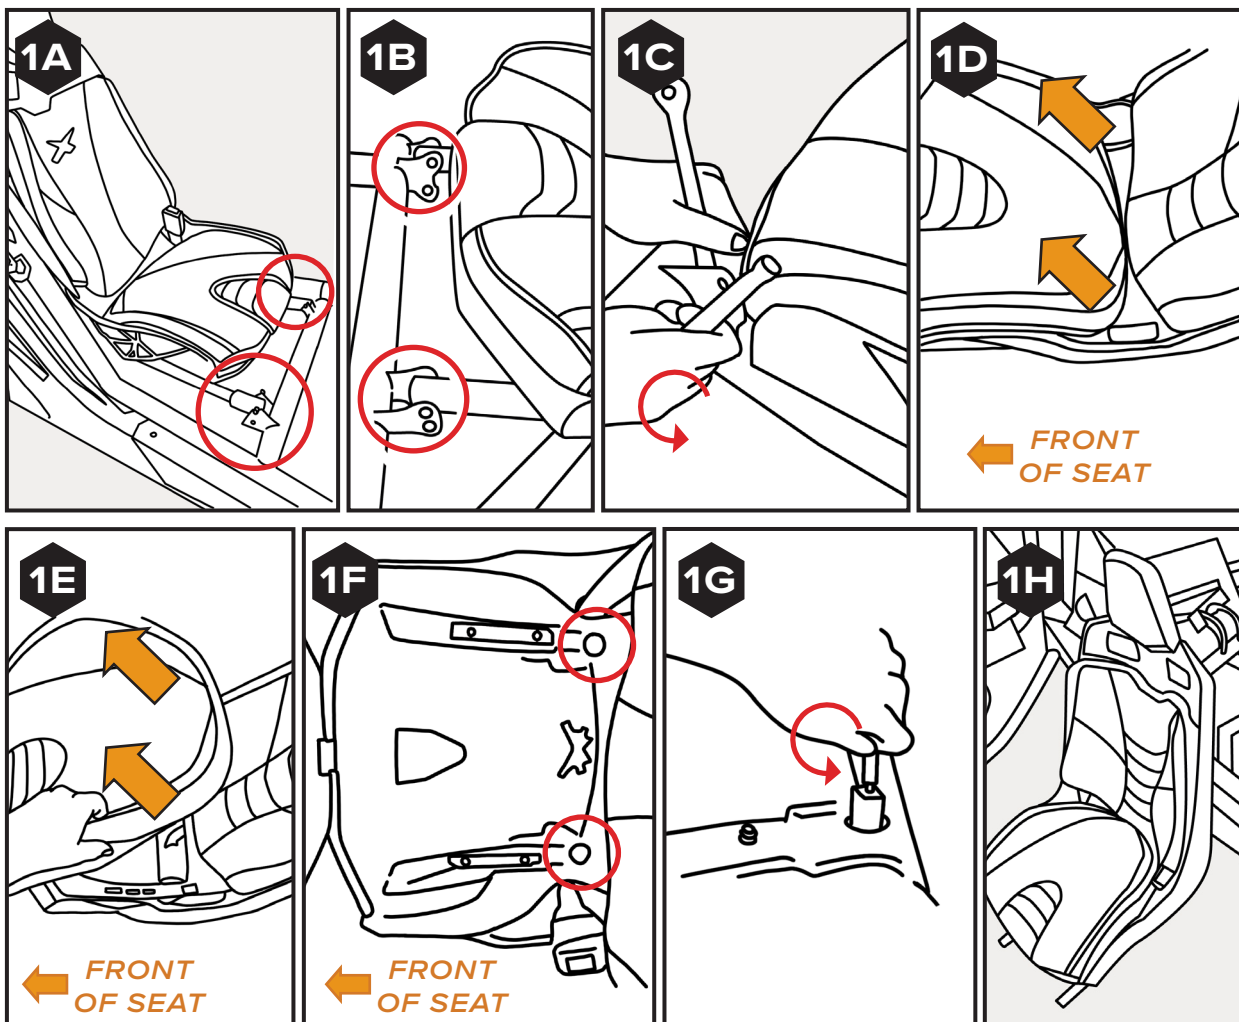












Remove the front center console panel using PUSH PIN PLIERS and T-30 TORX to remove the two push pins and two screws. Once fasteners are removed, remove panel by gently prying it out and set aside. [SEE FIGURES 1I & 1J]

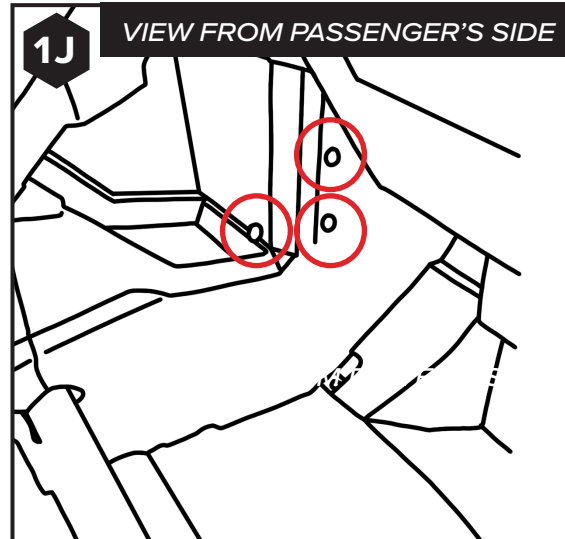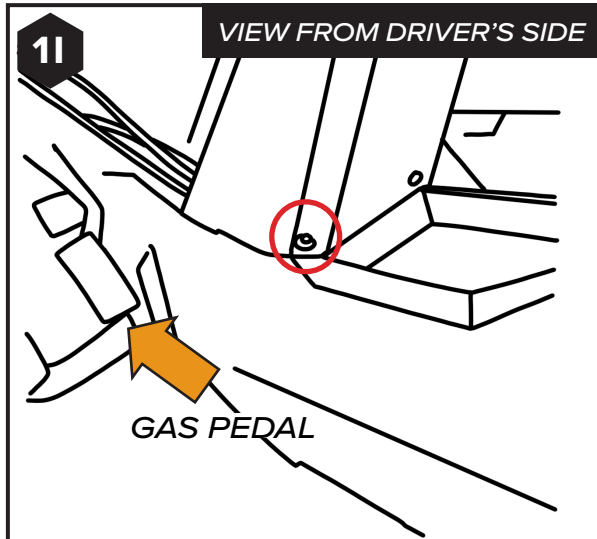

Remove the center console panels to access the bus bar and to gain access to where you'll be routing your wiring through in future steps. [SEE FIGURES 1K – 1S]

NOTE: No tools, just gently pull it towards you (outside of the vehicle) and up

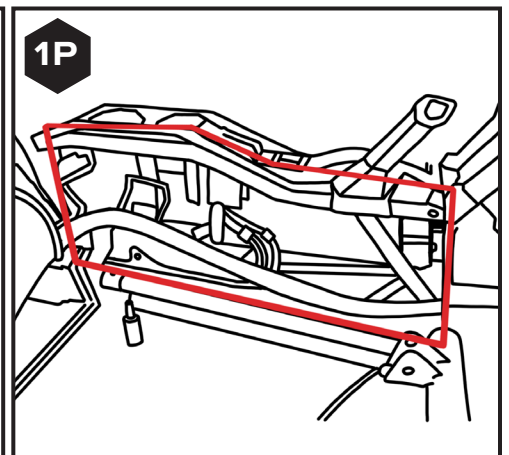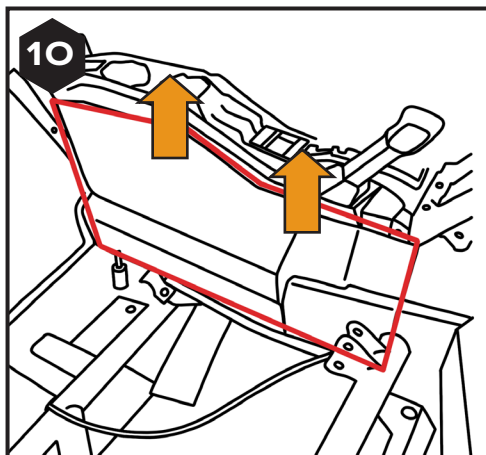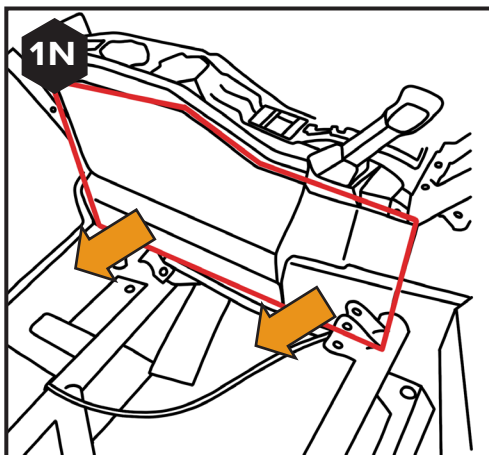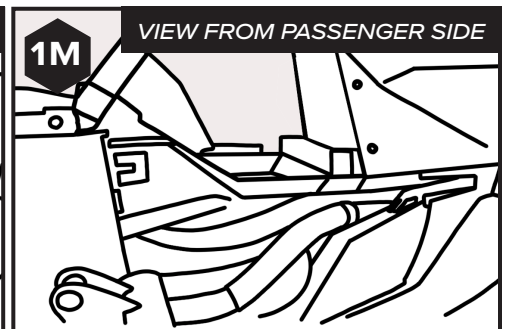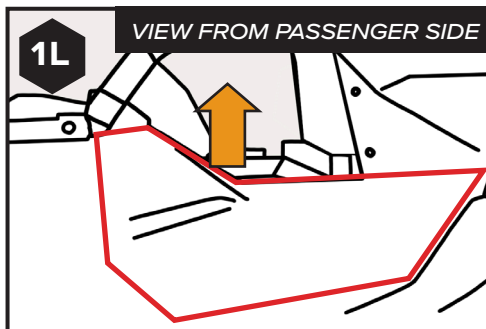
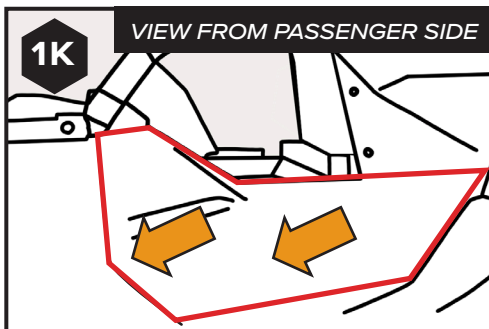


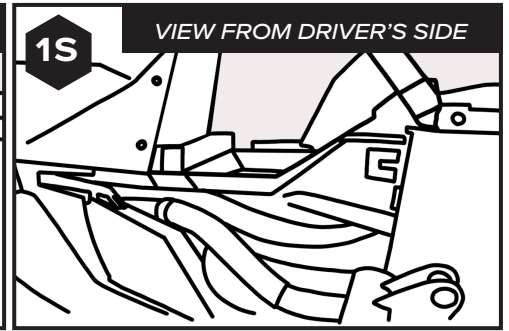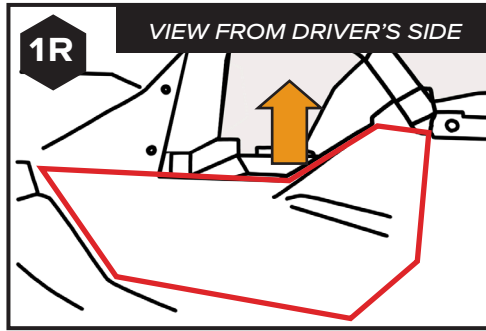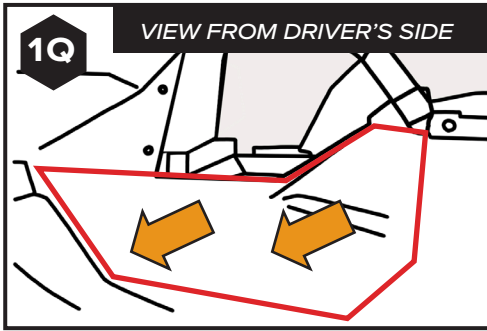

iv

Disconnect your battery which is located behind the seat removed in step 1i using a 10MM DEEP WELL SOCKET and a RATCHET. [SEE FIGURES 1T & 1U]

NOTE: Disconnect the negative battery terminal first to prevent arcing. Make sure cables don't touch each other or any metal surfaces when disconnected.


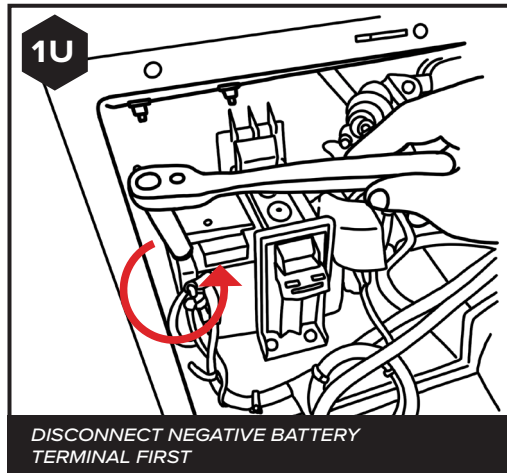
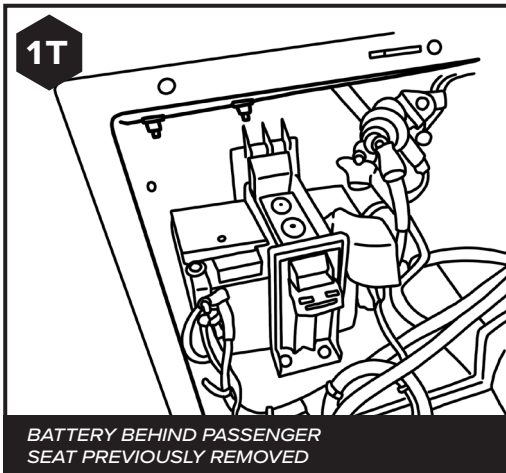


v

Remove the instrument cluster by removing the 4 torx screws at the front of the display using a T-20 TORX. [SEE FIGURE 1V]


Next, release the three tabs on the top of the screen of the cluster using a PICK to remove cluster. [SEE FIGURE 1W]

Finally, unplug the cluster by releasing the tab on the back of the connector, and set instrument cluster aside. [SEE FIGURE 1X]

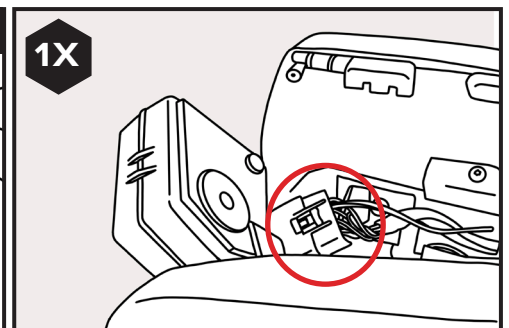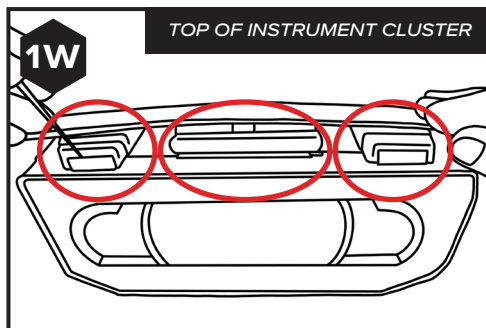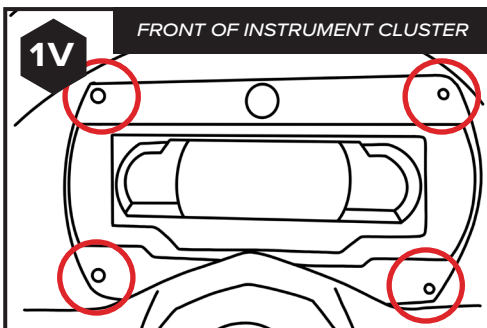


vi

Remove two rocker switch knock outs from the rocker switch panel by gently prying them off using a SMALL FLATHEAD SCREWDRIVER. You'll be installing the Turn Signal and Horn/Hazards rocker switches in those slots in a future step. [SEE FIGURES 1Y & 1Z]

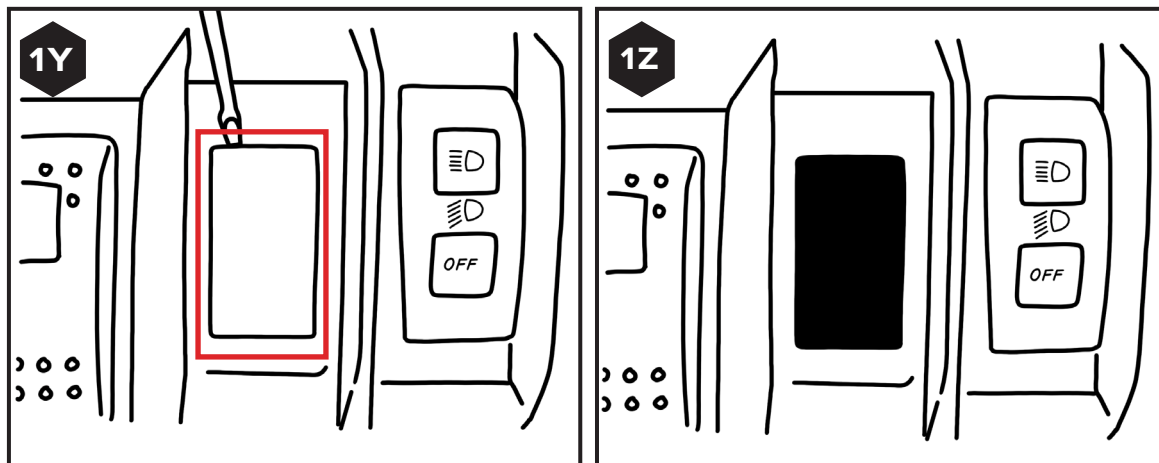

vii

Unplug your taillights. [SEE FIGURES 1AA – 1CC]

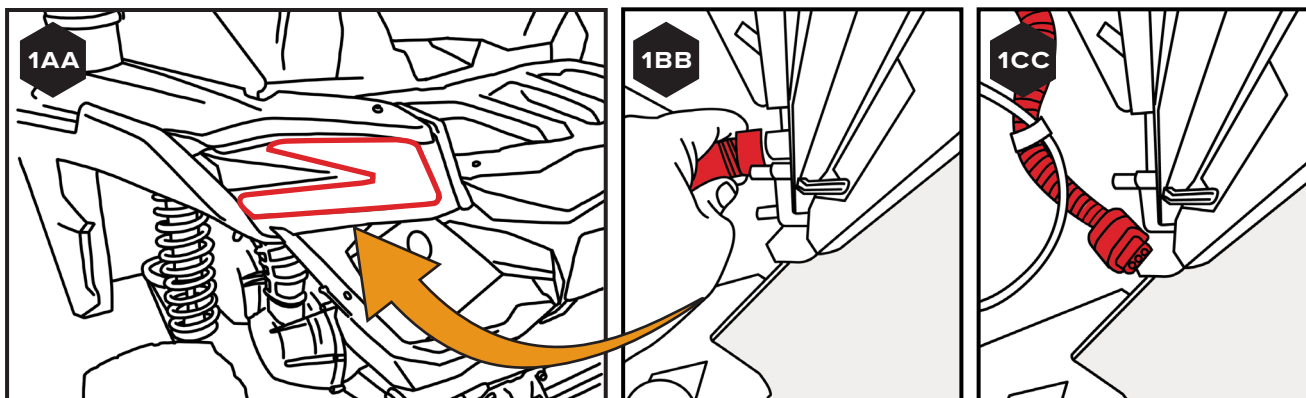

2


INSTALL ALL THE WIRING TO THE TURN SIGNAL CONTROLLER

i

Grab your Turn Signal controller and set it where you'll permanently mount it in a future step. [SEE FIGURE 2A]

NOTE: We recommend mounting your controller behind the front center console panel removed in step 1ii.

2A

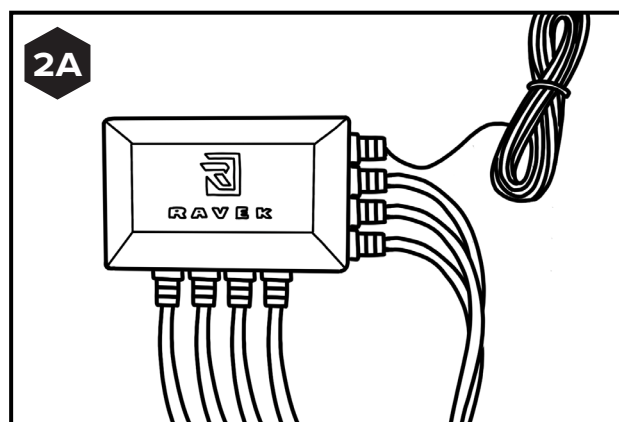



Plug all of your extension harnesses except for Horn/Hazards and Turn Signal harness into the controller's corresponding connectors. Even though all the connectors we use are waterproof, we recommend using a small dab of dielectric grease to each connection point. [SEE DIAGRAM A FOR AN OVERVIEW OF YOUR CONNECTIONS]

NOTE: All your extension harnesses have labeled heat shrink, allowing you to determine where each extension harness plugs into. [SEE DIAGRAM A]

NOTE: The Brake Input red wire does not have an extension harness to be plugged; this will be routed directly to the driver's side taillight harness in an upcoming step.




HEAT SHRINK YOUR CONNECTIONS









As you make plug & play connections, use the heat shrink tubing, provided to protect your connections from dirt on the trails.

Go over the connection points you make and cut 2" of heat shrink for each. Use a lighter or heat gun to shrink the tubing. [SEE FIGURES 3A – 3G]

HEAT SHRINK CONNECTIONS

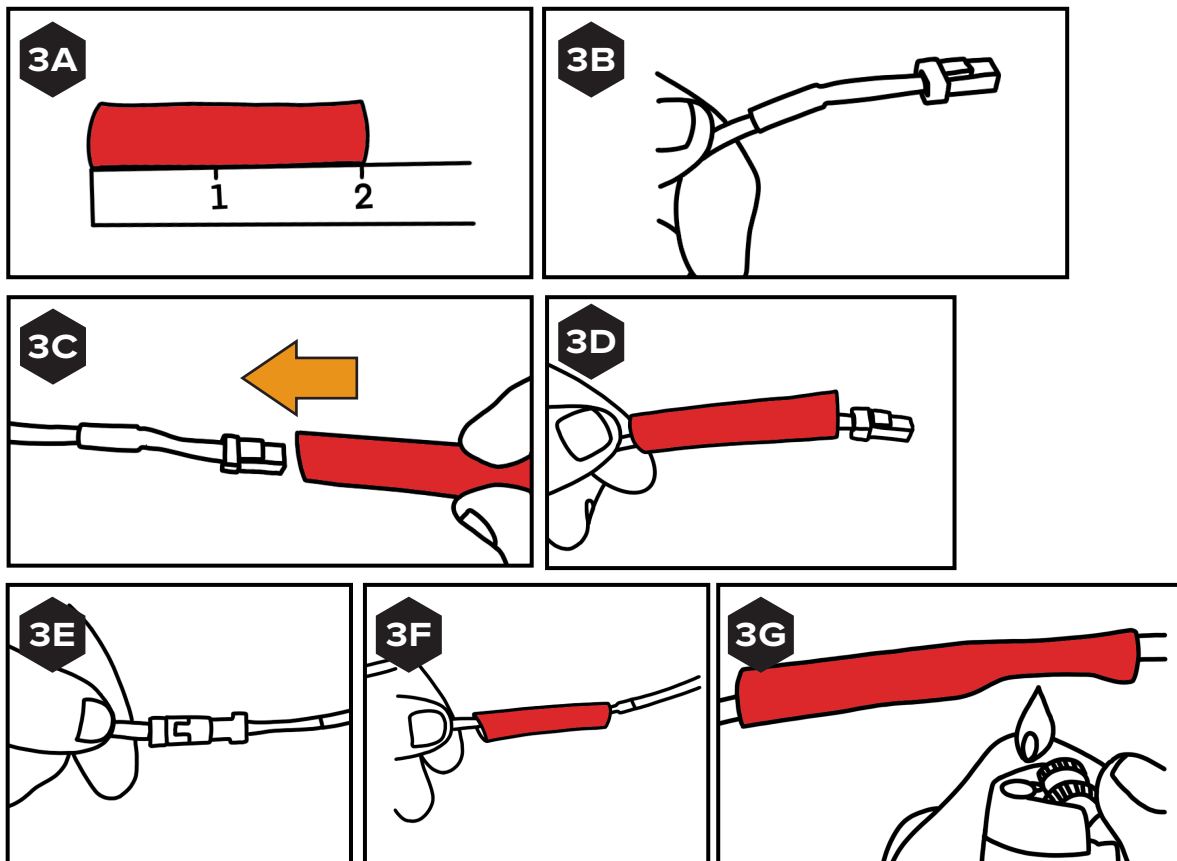



If you won't use the extra Taillight Harness connectors (mentioned in step 5) cut 1.5" piece of heat shrink tubing, slide it over the connector and heat shrink it using a lighter or heat gun. Use needle nose pliers to pinch the end of the extra heat shrink. This will act as a cap to protect the connectors from getting dirt inside. [SEE FIGURES 3H – 3M]

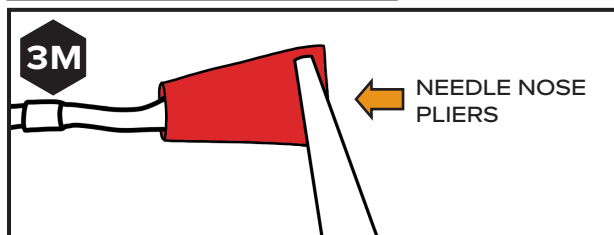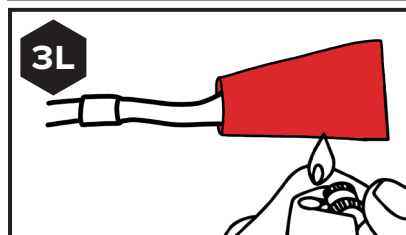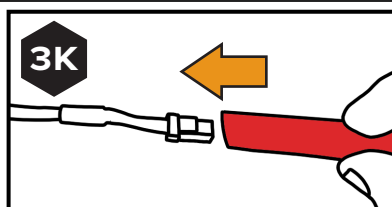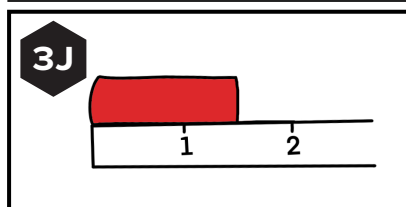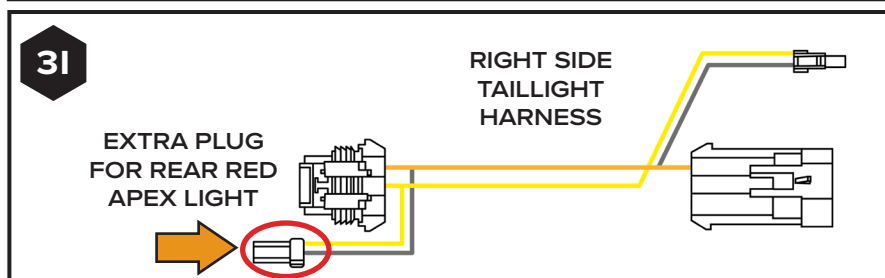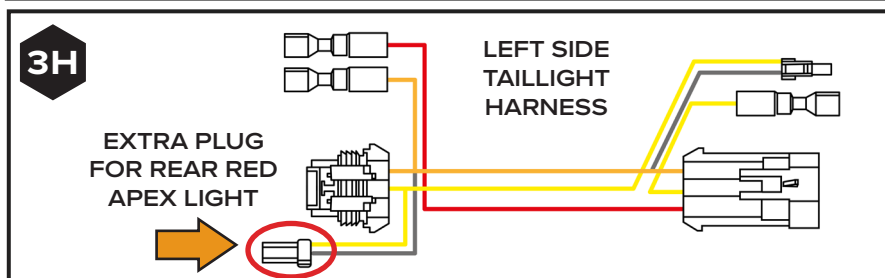

This step is optional as this will help with maintaining a clean OEM look. Not required for protection of the wiring.

Grab your Brake Input wire and route it through the wire loom (supplied with the kit).

[SEE FIGURE 3N & 3O]

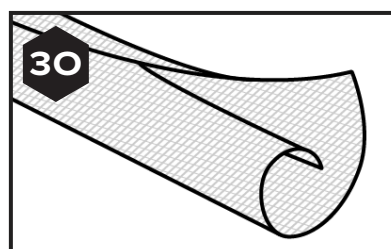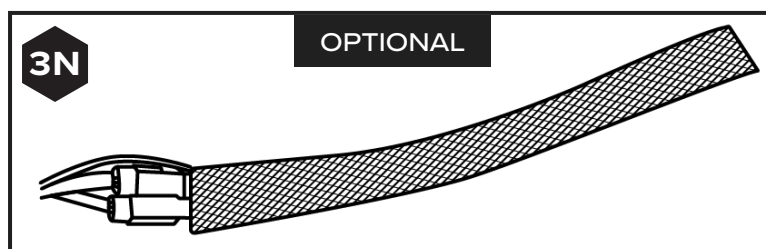


4

ROUTE THE REAR LIGHT WIRING

i

Grab your Rear Left extension, Rear Right extension, and Brake Input wire.

Route your LEFT REAR and Brake Input wires through the center tunnel to the left taillight and route your RIGHT REAR wire to the right taillight. [SEE FIGURE 4A & DIAGRAM B]

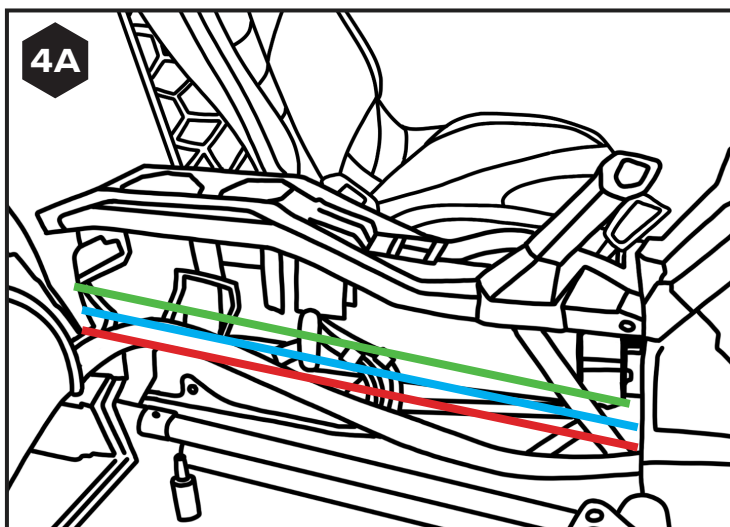



5

PLUG IN YOUR REAR LIGHTS WIRING

i


With the rear wiring coming out of the controller and routed up to the taillights, you are ready to install your taillight harnesses, included with the kit. [SEE FIGURES 5A & 5B]

NOTE: The left side Taillight Harness is easily identifiable as the Taillight harness with the most connectors coming from it.

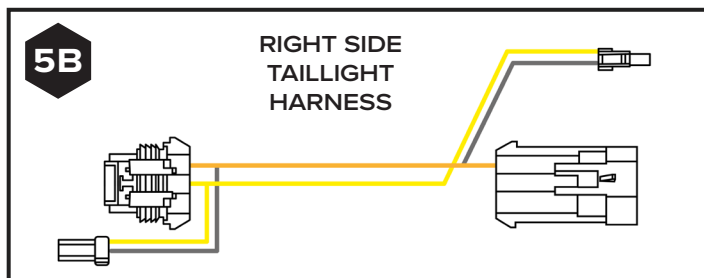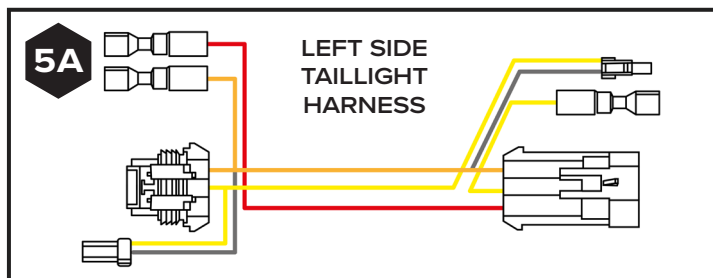

ii


Plug in the left side Taillight Harness to the left side taillight and to the unplugged OEM left side taillight harness from step 1vii. [SEE FIGURE 5C]

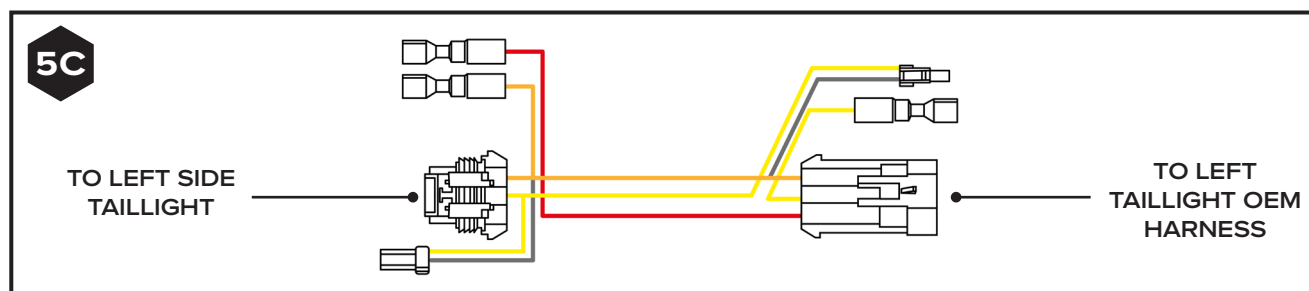




Plug your REAR LEFT extension harness into the corresponding labeled connector from the left Taillight harness, and plug your Brake Input wire to the connector labeled on the left Taillight connector. [SEE FIGURE 5D]

OTE: Extra plug on taillight harness provided to easily add RAVEK Rear Running & Brake Apex Lights to your Maverick (RAVEK Part #65-305), these will add running light, brake light, and turn signal functionality to your machine.

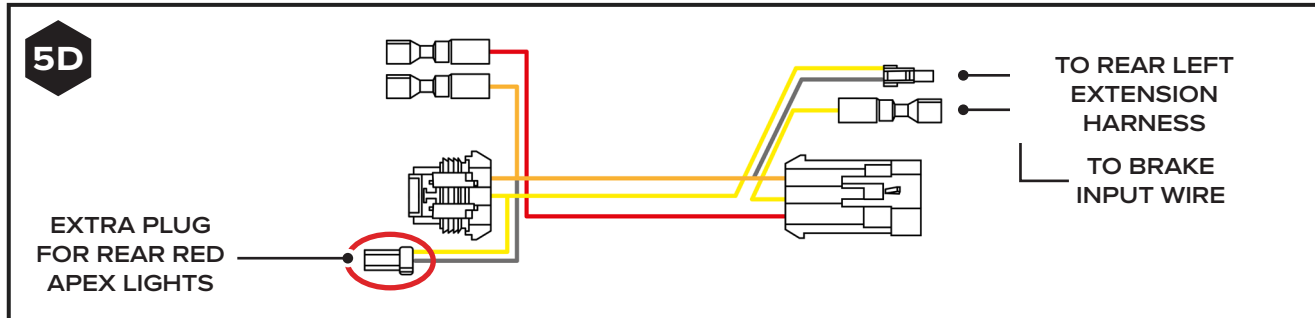


Repeat the previous two steps on the right Taillight with the right- side harness provided (excluding the Brake Input information). [SEE FIGURE 5E]

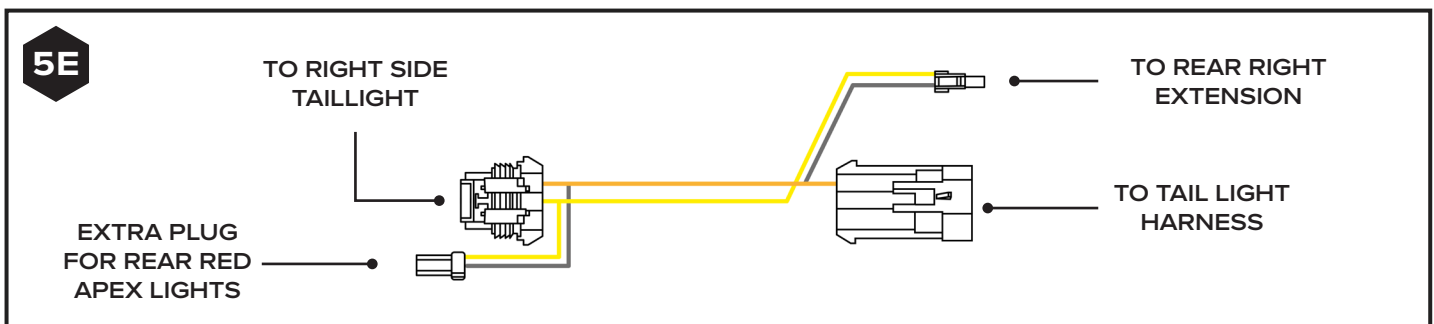


6 PLUG IN YOUR LICENSE PLATE ILLUMINATOR (OPTIONAL)



Locate the License Plate Illuminator provided with your kit. [SEE FIGURE 6A]

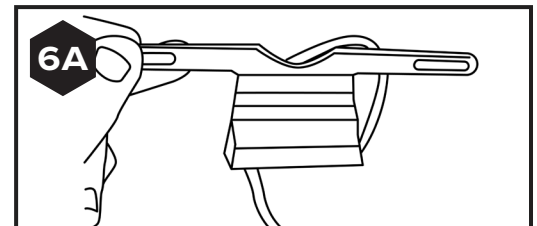


Plug the connectors from the License Plate Illuminator (White = Power)(Black = Ground) to the License Plate Illuminator Extension Harness. Plug the extension harness to the left Taillight Harness labeled accordingly. [SEE FIGURE 6B]

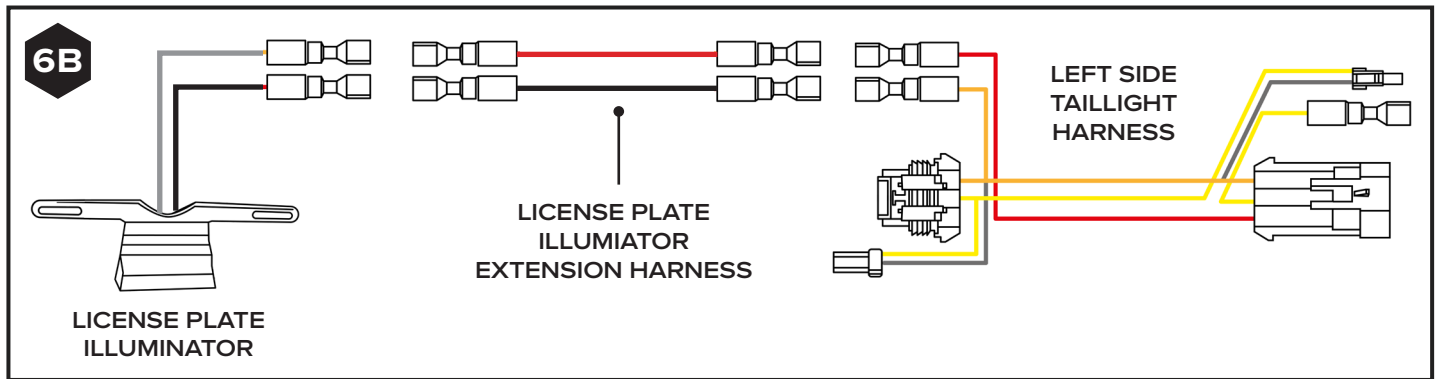

iii

Affix the License Plate Illuminator to your license plate, reusing the hardware from your license plate. [SEE FIGURE 6C]

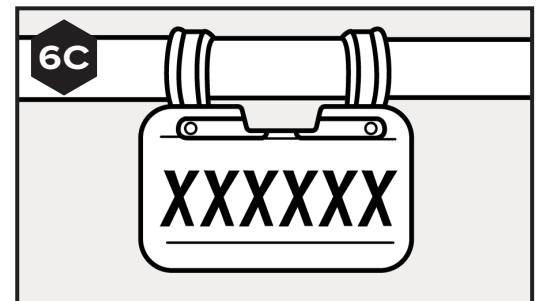

NOTE: Before driving your UTV on public roads, check your local laws. This includes verifying if a license plate illuminator is required.

7



ROUTE FRONT LEFT & RIGHT TURN WIRING

i

With all your rear wiring routed (but not yet secured), go to where you placed your Turn Signal Controller and grab your FRONT LEFT and FRONT RIGHT wires.

ii

Route your FRONT LEFT and FRONT RIGHT extension harnesses to the front end of the Maverick, where you went to mount your Apex Turn Signal Lights permanently (jump to the next step to see all the mounting options for your lights). [SEE FIGURES 7A & 7B]

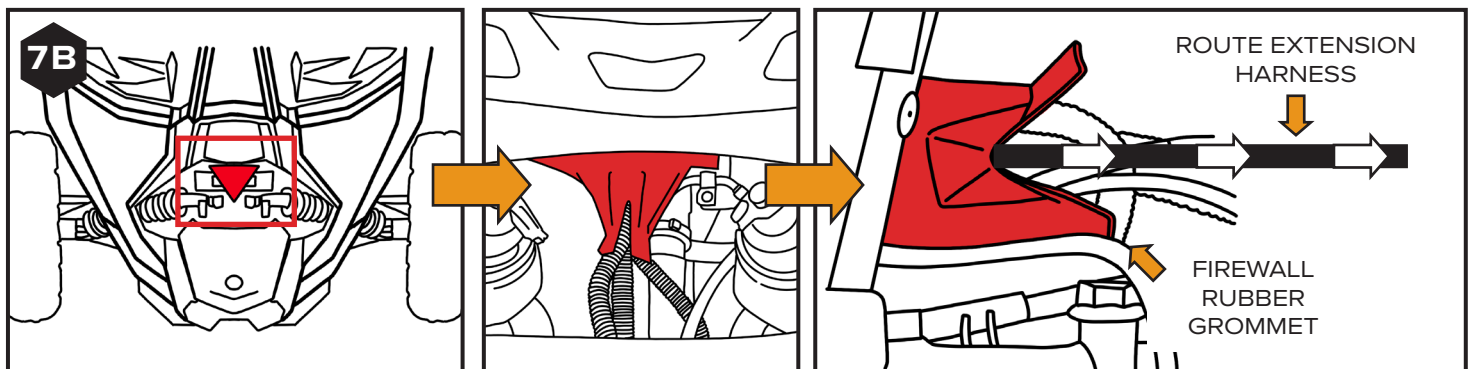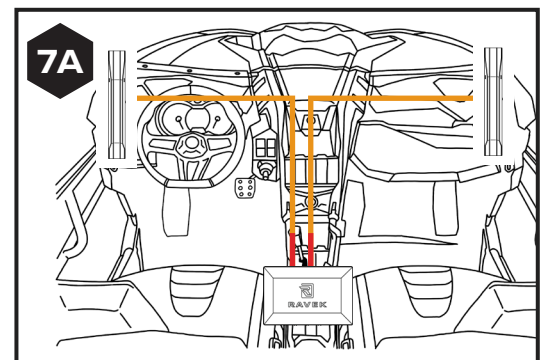

i

Your options include:

- **Exterior Body Panel**
Any exterior panel with 8" of flat surface for mounting
- **Roof Mounting**
- **Roll Bar/Bumper Mounting**



Check out the video to the right (see QR code) for a 50 second walkthrough of the different Apex light mounting options.


i

If you have chosen to mount your Apex Lights to a roll bar or bumper, you will follow the Roll Bar mounting steps detailed in step 9A.

If you have decided to mount your Apex lights to either an exterior panel or to your roof, you now have to decide whether you want to mount your Apex lights via:

- Adhesive mount (i.e. no drill) → follow step 9B**
- Drill-mount for increased security → follow step 9C**

OPTION A DIAGRAM - ROLL BAR MOUNTING



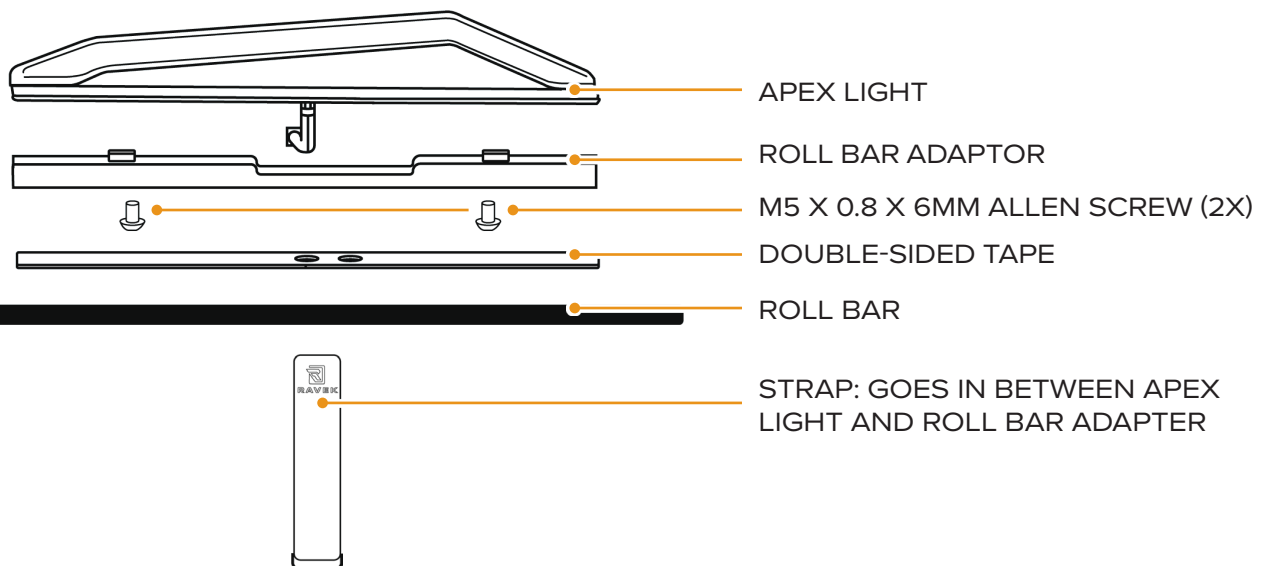




INSTALL ROLL BAR ADAPTOR



Install the roll bar adapter to the base of the light by using two of the M5 x 0.8 x 6mm Allen Screws with a 3MM ALLEN WRENCH. [SEE FIGURES A – C]

NOTE: Choose which side you would like your wire to exit the light that allows you to best hide your wires.

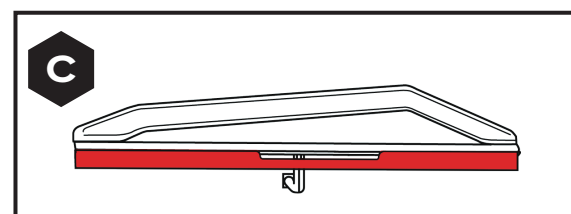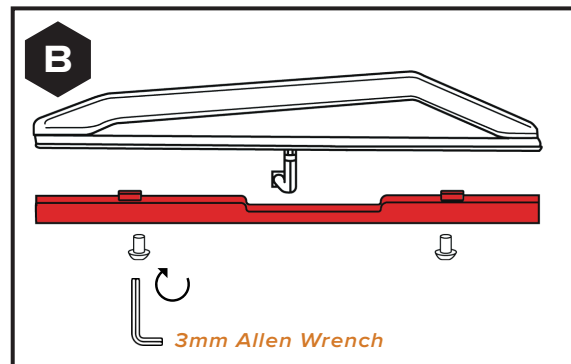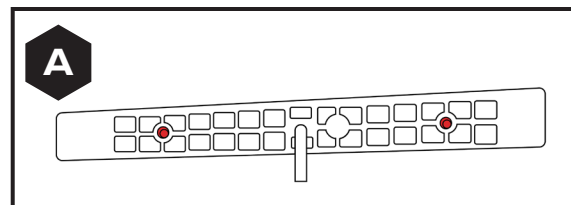

INSTALL STRAP





Once the roll bar adapter is securely attached to the light, install the strap provided through the opening between the light base and the roll bar adapter. [SEE FIGURES D & E]

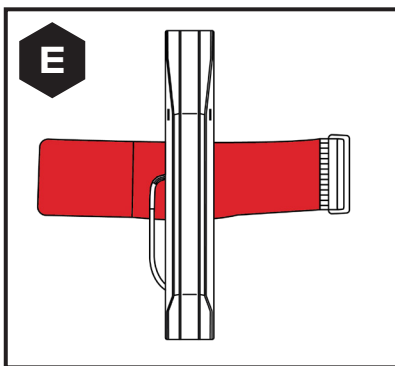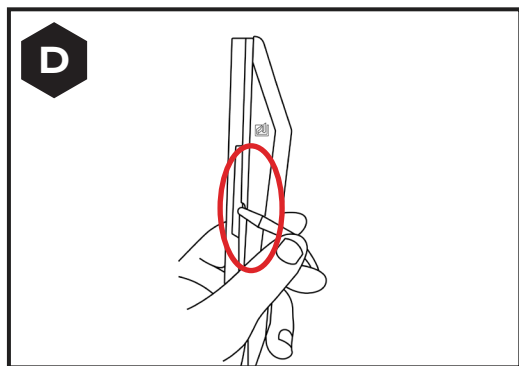

WIPE WITH RUBBING ALCOHOL

Before you permanently install your Apex Light to the UTV's roll bar you've chosen, wipe down the roll bar and the base of the light with the rubbing alcohol wipe provided and let dry.




Next wipe down the roll bar and light base with the adhesion promoter wipe provided. Let dry. [SEE FIGURES F – J]

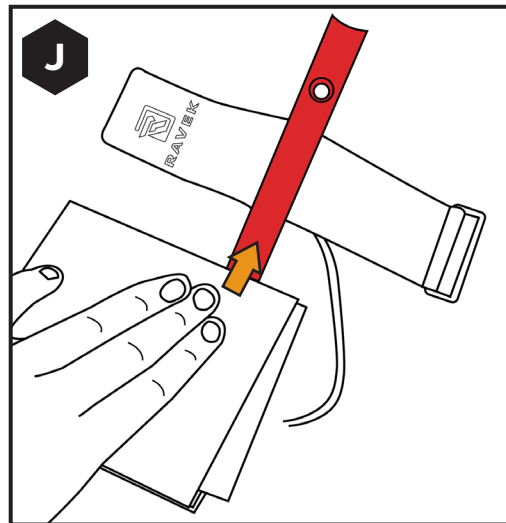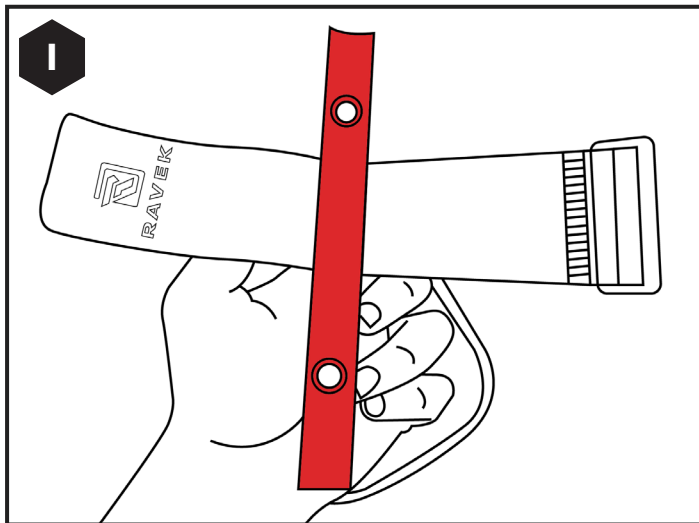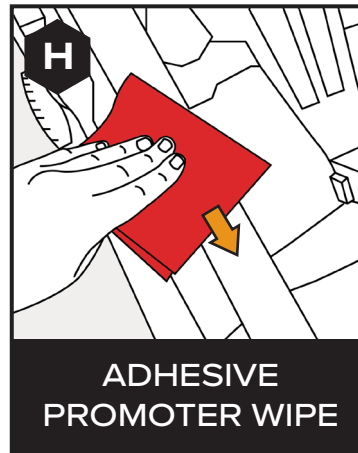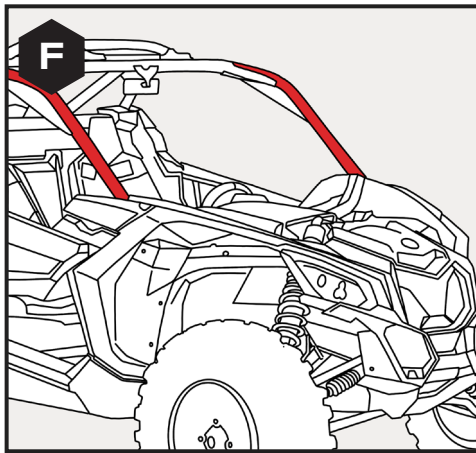

iv

APPLY TAPE

Apply the double-sided tape to the dry Apex Light's roll bar adapter, and attach the light to the surface you cleaned and prepared in the prior step. [SEE FIGURES K – N]

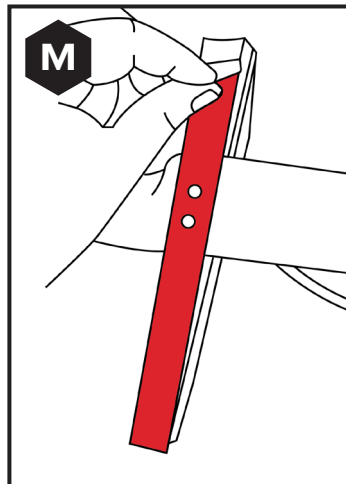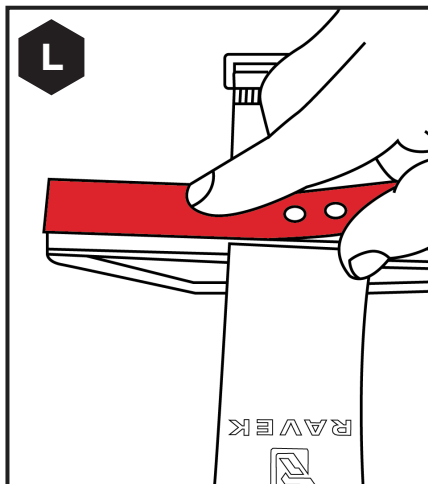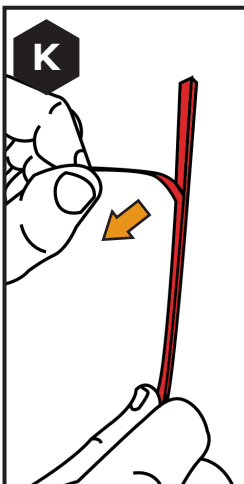




TIGHTEN STRAP

Tighten straps onto base and roll bar. [SEE FIGURES O & P]

NOTE: If you have excess length of strap you can rotate the buckle away from the slack to reduce the slack in the strap.

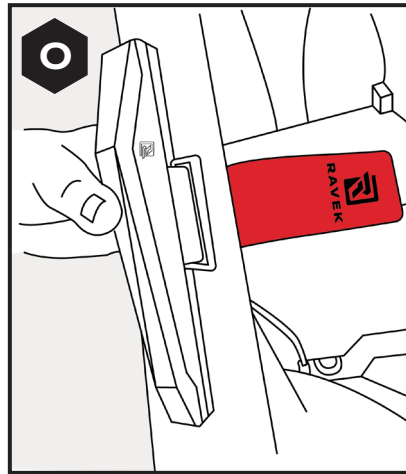


JUMP TO STEPS 10-15 TO FINISH INSTALL

7B

OPTION B - ADHESIVE ONLY MOUNTING:


OPTION B DIAGRAM - ADHESIVE ONLY MOUNTING

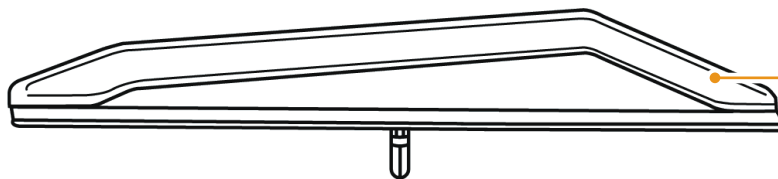

APEX LIGHT



DOUBLE-SIDED TAPE




PREPPED FLAT PANEL



LOCATE A SURFACE TO MOUNT TO

Locate an exterior panel with 8" of flat surface for mounting. [SEE FIGURE A]

NOTE: If you're adhesive mounting the Apex Lights to the roof, we recommend drilling a hole to feed the wires through. The Apex Light adhesive creates a water-tight seal.

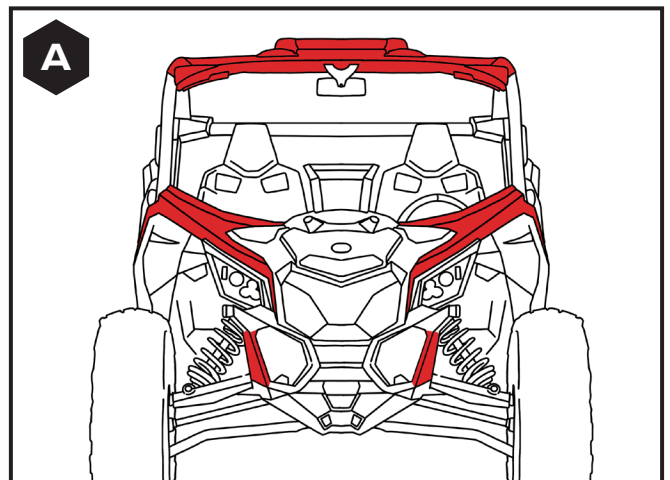


ii

WIPE DOWN SURFACES

Before you permanently install your Apex Light to the UTV's flat panel you've chosen, wipe down the panel and the base of the light with the rubbing alcohol wipe provided and let dry.

Next wipe down the panel and light base with the adhesion promoter wipe provided. Let dry. [SEE FIGURES B & C]

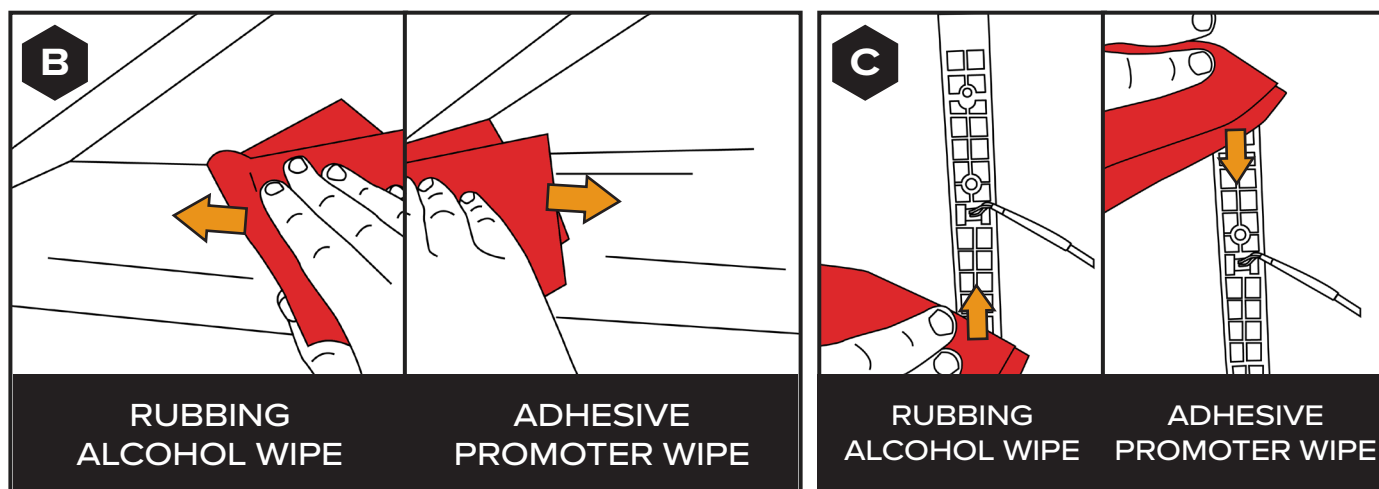


iii

APPLY TAPE

Apply the double-sided tape to the Apex Light's base and affix the light to the prepped surface. [SEE FIGURES D – G]


NOTE: Be sure the whole light's base is in contact with the surface of the UTV to ensure the light will hold up permanently.

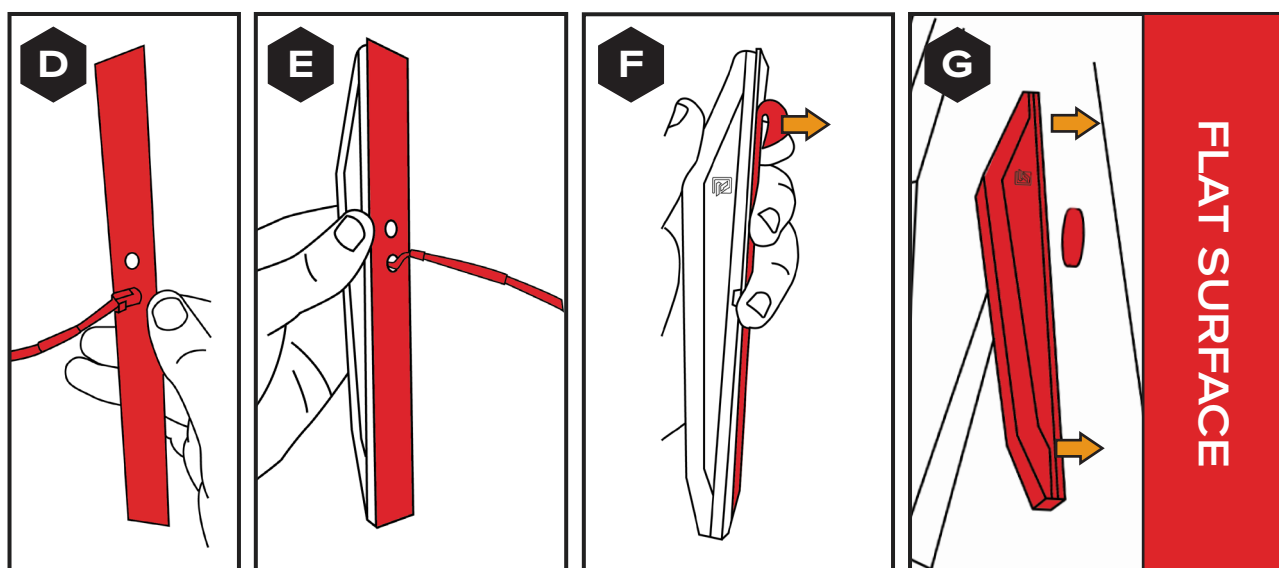

JUMP TO STEPS 10-15 TO FINISH INSTALL

7C **OPTION C - DRILLED AND ADHESIVE MOUNTING:**

OPTION C DIAGRAM - DRILLED AND ADHESIVE MOUNTING

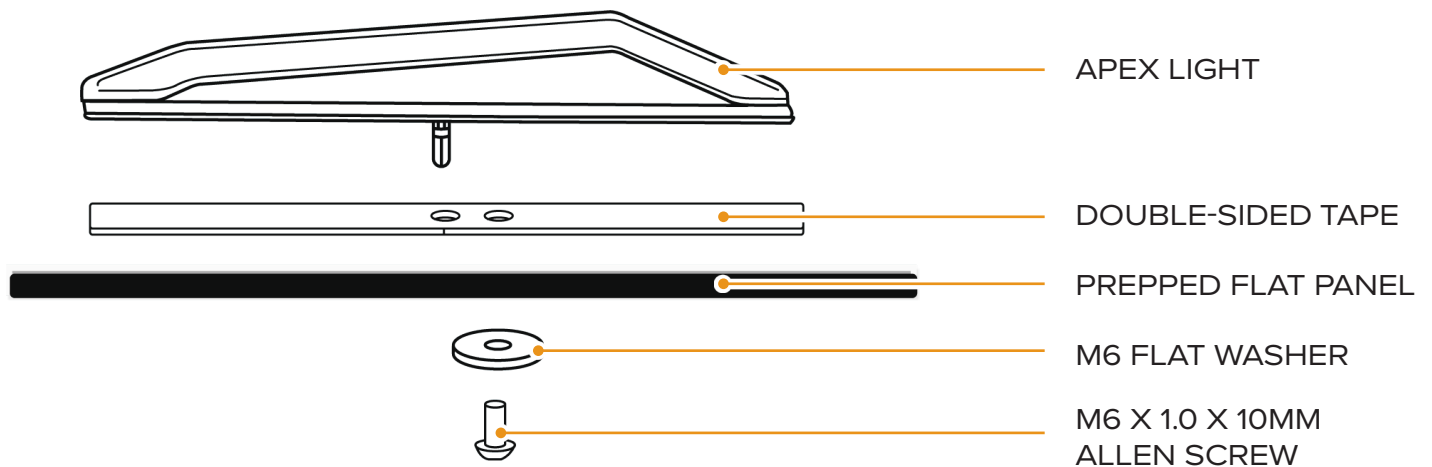


i

LOCATE A SURFACE TO MOUNT TO

Locate an exterior panel with 8" of flat surface for mounting.
[SEE FIGURE A]


A

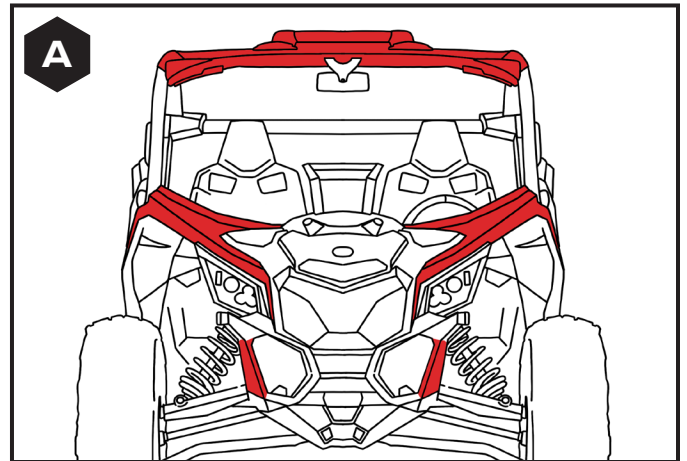

ii

MARK HOLES TO DRILL

Use the double-sided tape holes as a template for the drilling locations. Confirm you can access the inside of the panel that you'll need to be able to access this area with your flat washer. [SEE FIGURES B – D]

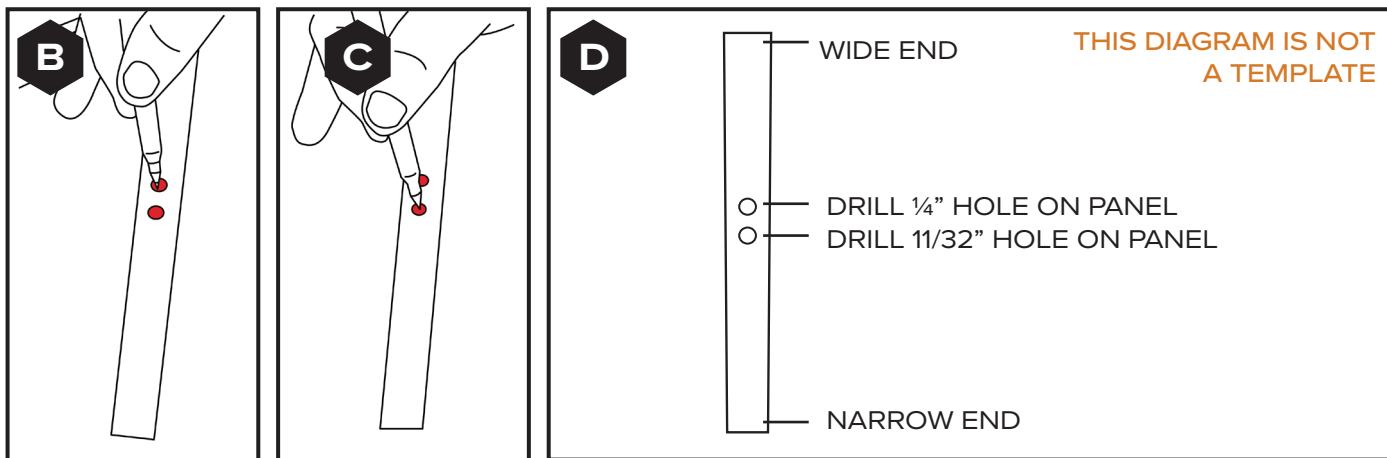

DRILL 1/4" HOLE

Once you have your holes marked, drill a 1/4" hole that will be used to feed the screw through.

NOTE: We recommend using a brad point drill bit to avoid damaging your panel.



DRILL 11/32" HOLE


Drill a 11/32" hole that you will feed the Apex Light's wire connector through.



WIPE SURFACE WITH RUBBING ALCOHOL

Before you permanently affix your Apex Light to the UTV's flat surface you've chosen, wipe down the flat surface and the base of the light with the rubbing alcohol wipe provided and let dry.


Next wipe down the flat surface and light base with the adhesion promoter wipe provided. Let dry. [SEE FIGURES E & F]

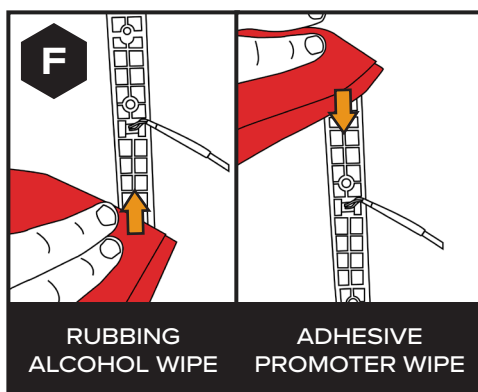

vi


APPLY TAPE

Apply the double-sided tape to the Apex Light's base. [SEE FIGURES G – I]

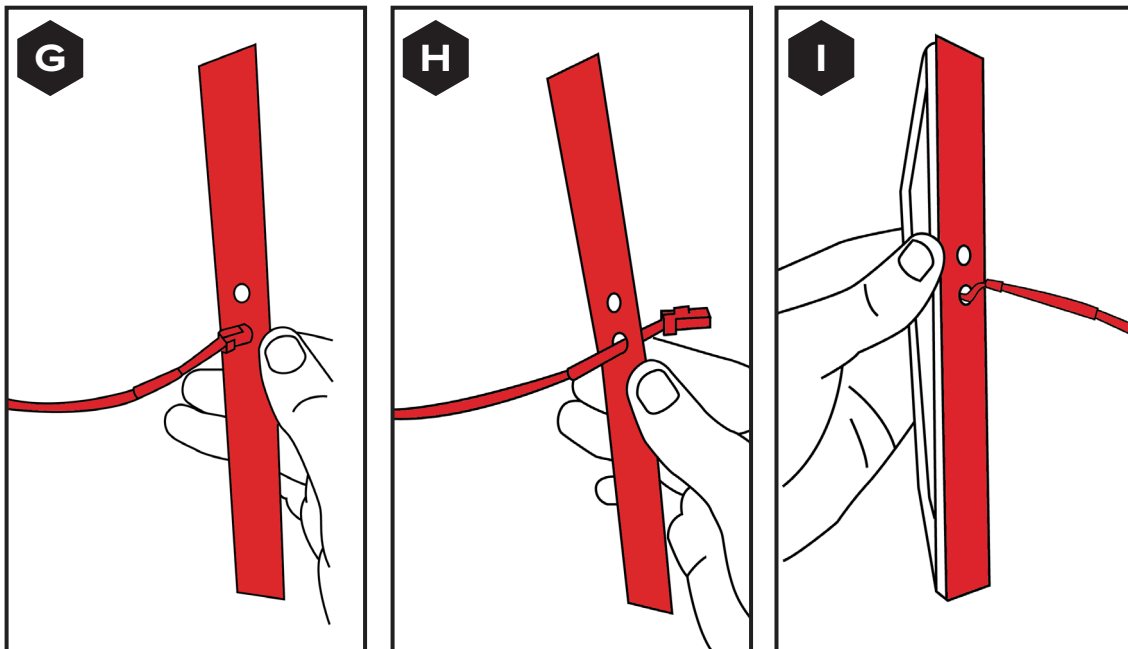**vii**

ADHERE LIGHT TO PREPPED SURFACE

Feed your light's wiring through the 11/32" hole. Peel away the double-sided tape cover, and stick the Apex Light to the prepped surface. [SEE FIGURES J – L]


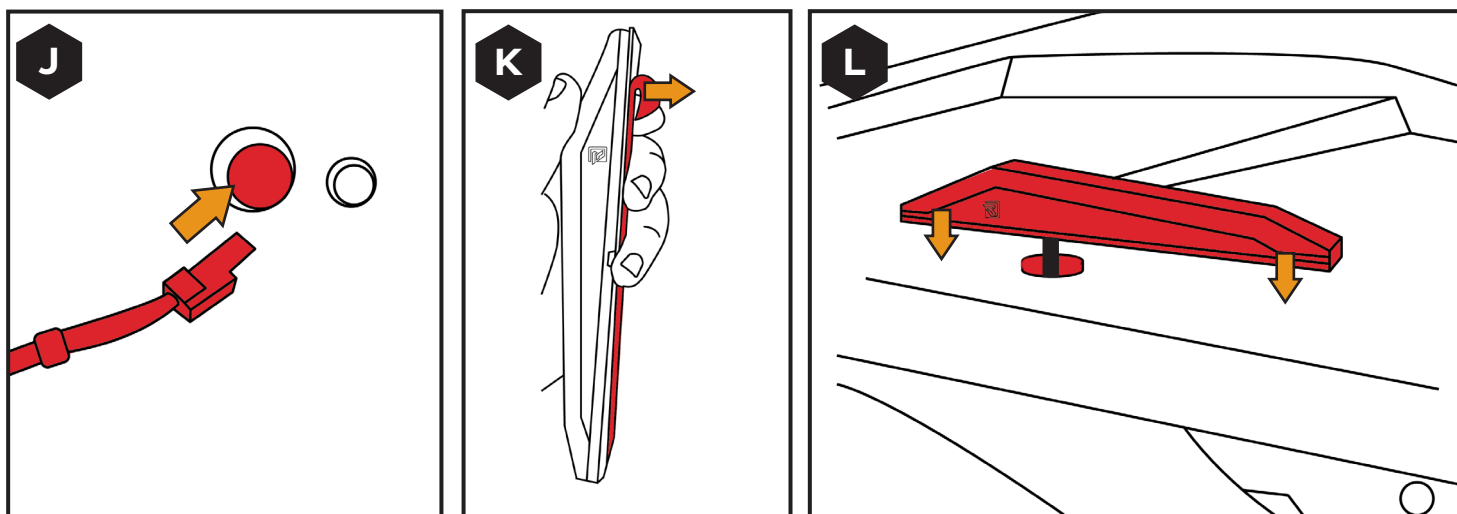


THREAD IN SCREW

Thread your M6 x 1.0 x 10mm Socket Allen Screw with an M6 Flat Washer through the backside of the panel into the light's base using a 4MM ALLEN WRENCH. [SEE FIGURES M & N]

NOTE: If a longer screw is required, you have two options:

1. Give us a call or email, and we will express mail you a screw of the length you need.
2. Go to your local hardware store and purchase a M6 x 1.0 x (your desired length).

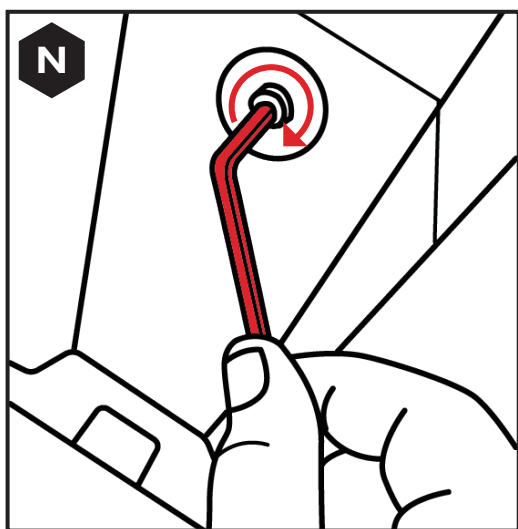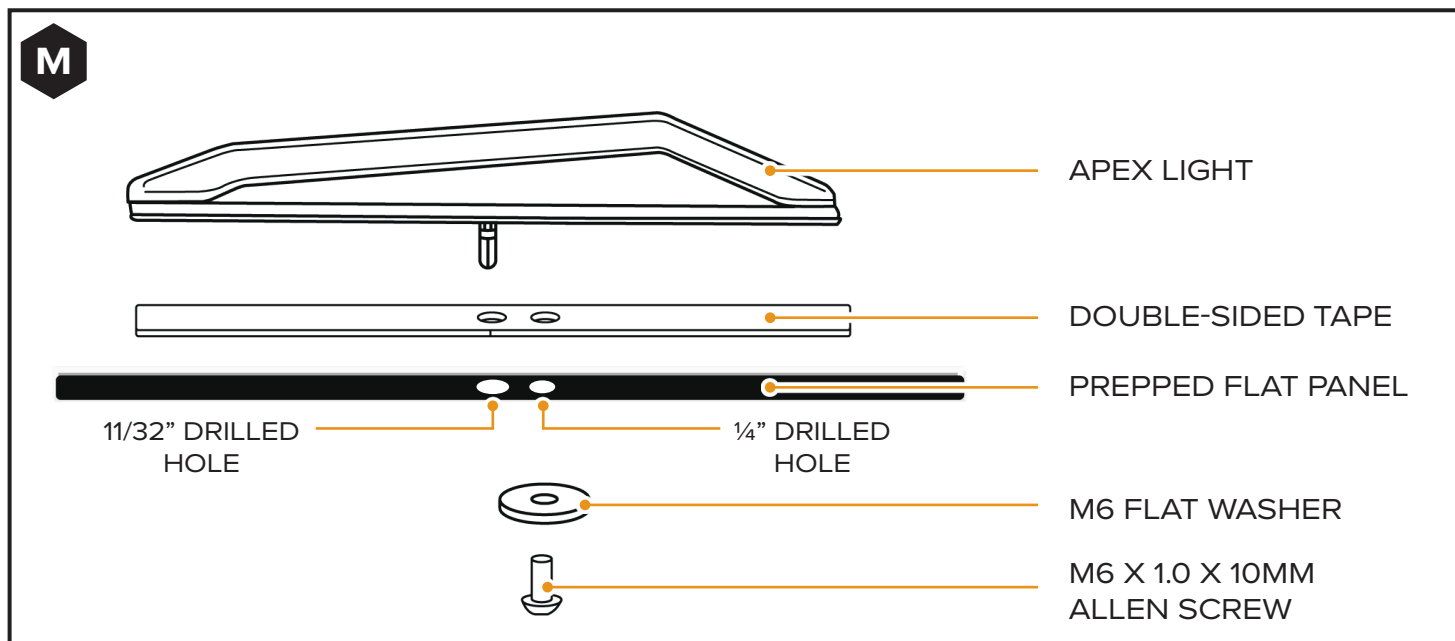

JUMP TO STEPS 10-15 TO FINISH INSTALL


i

- Grab your Turn Signal rocker switch and extension wire. Feed the extension wire through your chosen open slot in your switch panel.
- Route the small plug on the extension wire to where your controller is and connect it to the controller.[SEE FIGURE 10A]

NOTE: The easiest way to route the extension wire is through the rocker switch open slot and to your controller, as described above.

NOTE: Repeat this process with the Horn/Hazard Switch extension wire.

10A

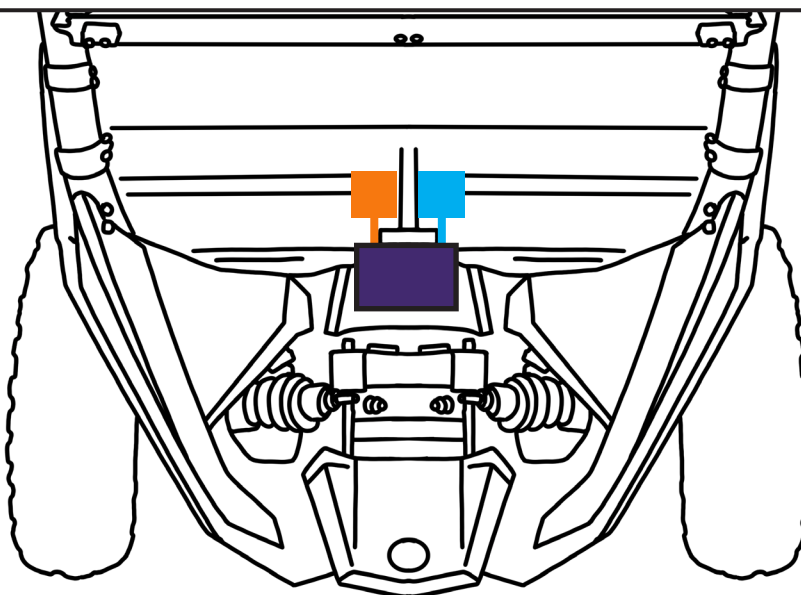

HORN/HAZARDS
ROCKER SWITCH AND
EXTENSION HARNESS

TURN SIGNAL
ROCKER SWITCH AND
EXTENSION HARNESS

CONTROLLER


i

Return to the Turn Signal Controller and route the Horn Extension harness to the front of the Maverick, where you will permanently mount the Horn reusing an OEM bolt that you select.

ii

Grab your horn from the kit once your wiring is fed to the front area. [SEE FIGURE 11A]


11A

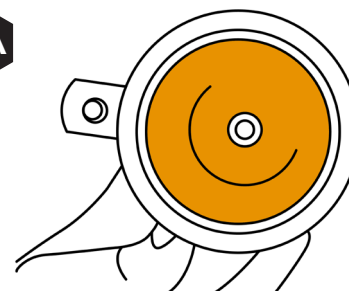

iii


Install the horn in an open area that is out of the way of suspension or moving parts of the Maverick X3, reusing a stock OEM bolt. [SEE FIGURE 11B]

NOTE: We recommend installing it on the front end of the Maverick using one of the screws located nearby the firewall. [SEE FIGURE 11B]

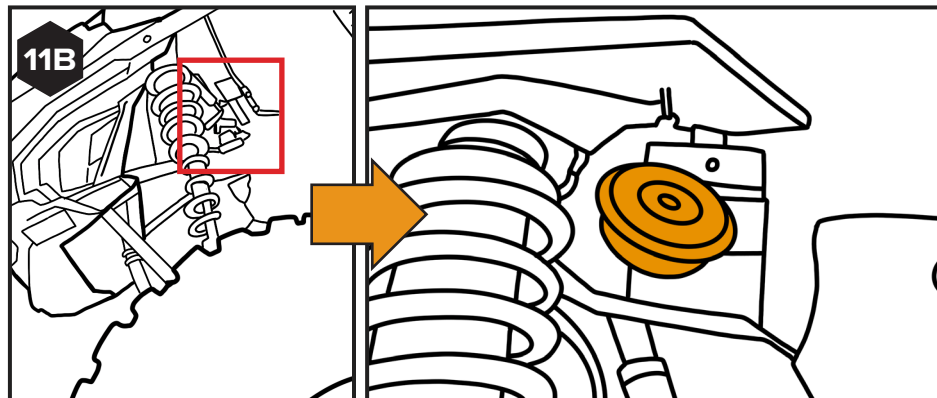

iv

Plug both spade connectors from the extension harness to the connectors on the backside of the horn (no specific connector to plug into). [SEE FIGURE 11C]

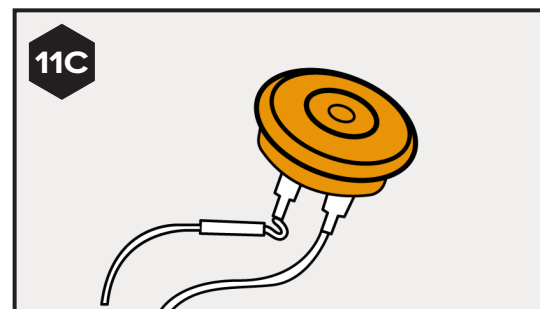


12 PLUG IN YOUR TURN SIGNAL CONTROLLER TO POWER

i


Return to the Turn Signal Controller and hook up the ring terminals from the Power Harness to the bus bar located behind one of the center tunnel panels removed in step 1iii (FIGURES 1P – 1R). Remove the nuts on the top and bottom terminals using a 10MM DEEP WELL SOCKET and RATCHET. [SEE FIGURE 12A – 12B]

Hook up your power harness ring terminals as follows: red ring terminal to the bottom terminal at the bus bar (red to bottom terminal), and black ring terminal to the top terminal at the bus bar which is ground (black to top terminal).

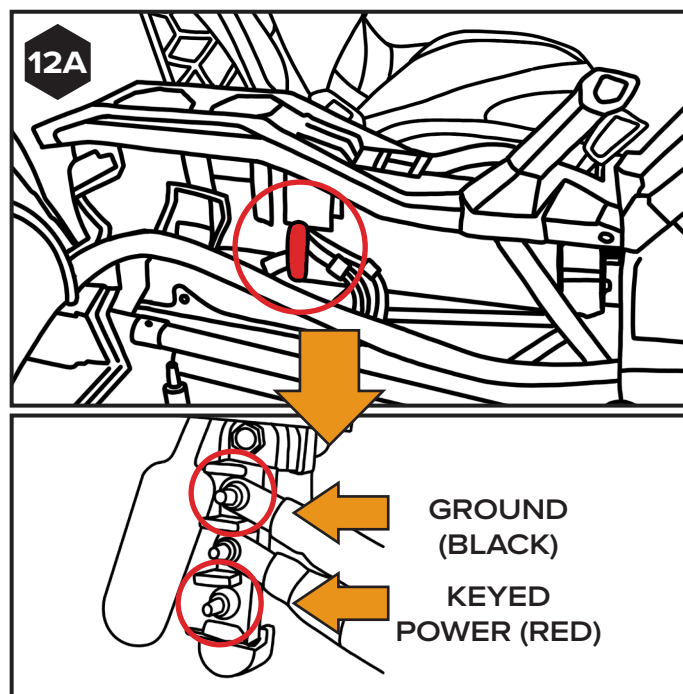



i

Grab the connector that was once plugged into the instrument cluster. [SEE FIGURE 13A]

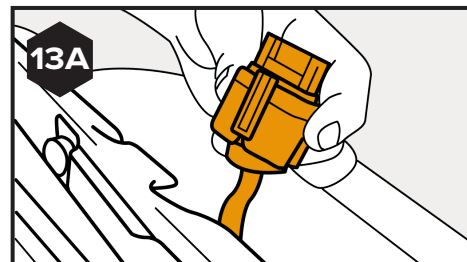

ii




Remove the white pin cover. First, release the cover by depressing the two tabs at each end of the connector using a PICK. Once tabs have been released, completely remove cover by carefully prying it out using a PICK. [SEE FIGURES 13B - 13D]

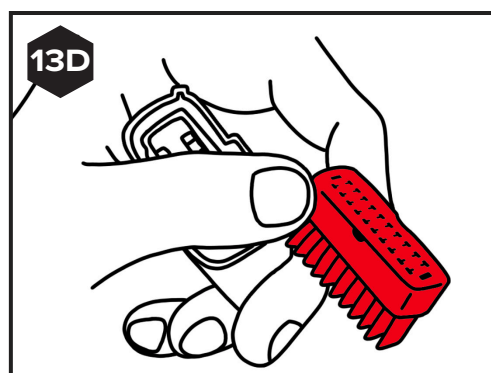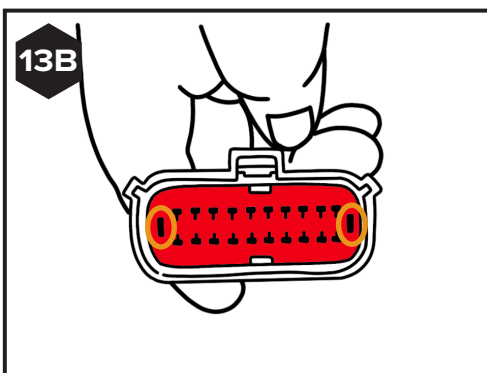

iii


Remove the plastic pin inserts on terminals 4 and 14 by pushing them outward from wire side of the plug. [SEE FIGURES 13E & 13F]

NOTE: Pin locations are not labeled on the connector but use figure 13E as a guide. (4th pin on the top row and 4th pin on the bottom row looking at the connector with the push tab facing up) [SEE FIGURES 13E – 13G]

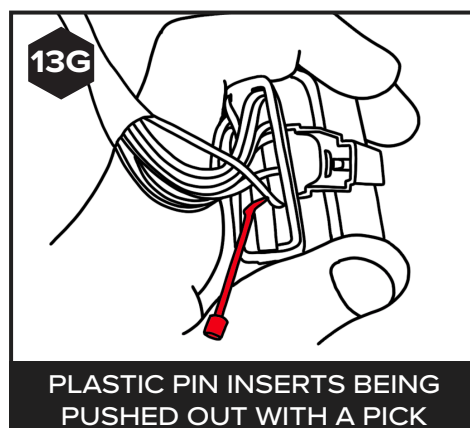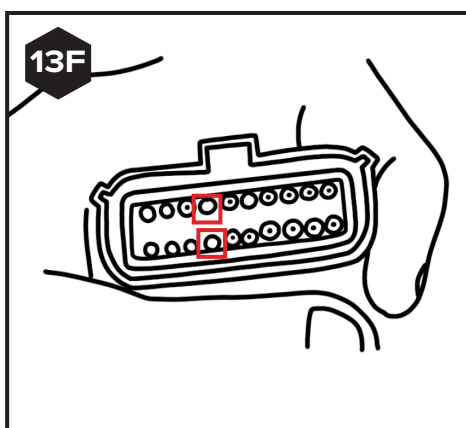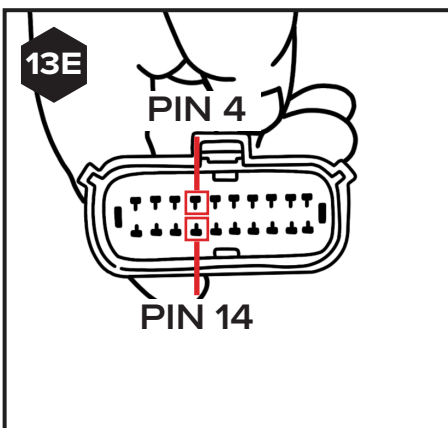


iv

Grab your RIGHT DI wire, insert the pin from the wire side of plug into terminal 4, and verify it lines up evenly with the other pins. [SEE FIGURE 13H]

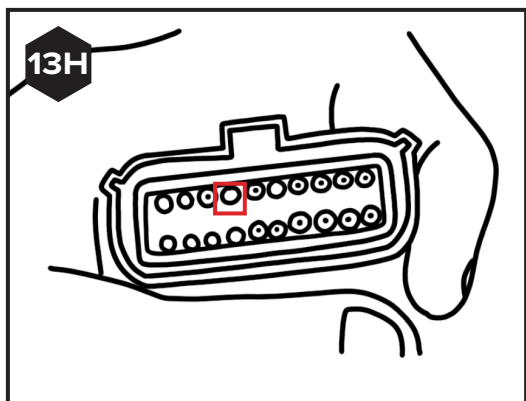



v

Grab your LEFT DI wire, insert the pin from the wire side of plug into terminal 14, and verify it lines up evenly with the other pins. [SEE FIGURE 13I]

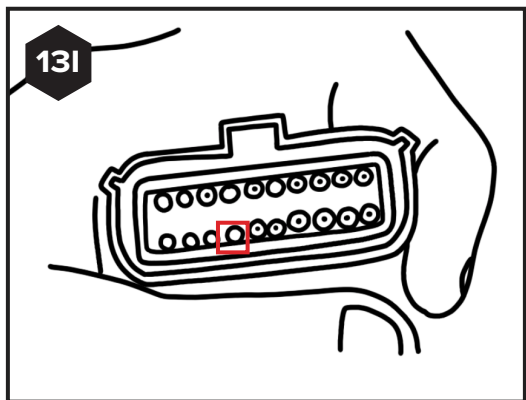

vi

Once pins are precisely inserted into their respective terminals, you may snap the connector back to its default closed format and reinstall the white cover previously removed, by clipping it into place. [SEE FIGURES 13J & 13K]

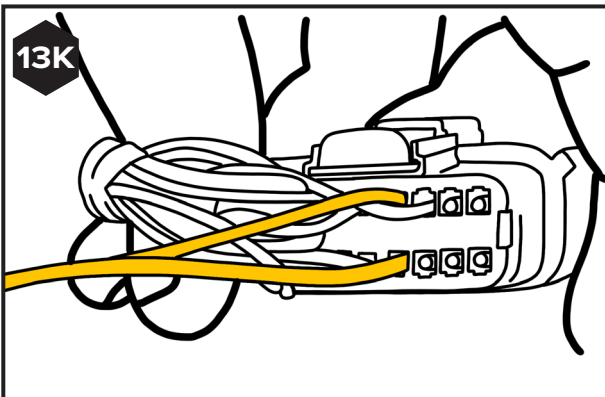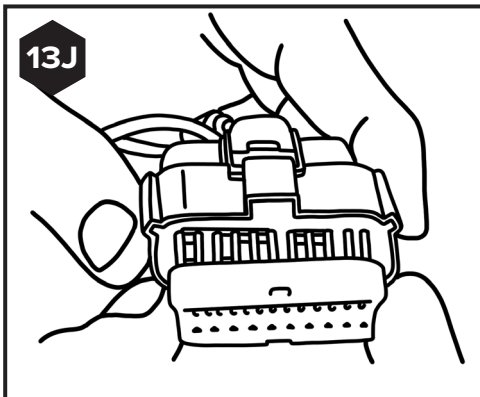

i

Now it's time to confirm the kit is working as designed, but before reconnect your battery by reversing step 1.iv.

With your battery connected turn your Maverick's Power on, and test all the kit's features:

- Running brake lights
- Running white lights
- Brake light w/ pulse effect
- Left turn signal → 15 second auto cancel
- Left turn signal dash indicator (in gauge cluster)
- Right turn signal → 15 second auto cancel
- Right turn signal dash indicator (in gauge cluster)
- Hazards
- Horn (plug your ears)

i

Once the function of the kit is verified and everything is working appropriately, go over all your connection points and heat shrink them (if you have not done so already) as mentioned in step 3.

ii


Use the zip ties supplied in the kit, secure all of your wiring to frame tubes or roll bars (away from hot or moving components).

iii

Once all of your wiring is secured with the help of the zip ties, cut all the excess zip ties using side cutter pliers.

iv

Place the two strips of double-sided tape provided in the kit on the backside cavities on the controller. [SEE FIGURE 15A]

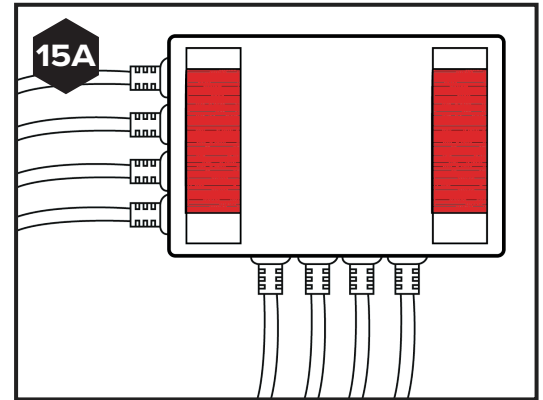

v


Locate a nice flat surface to stick the controller to. Clean the surface with the Rubbing Alcohol Wipe and Adhesive Promoter

Wipe provided in the kit, and let dry before continuing.

NOTE: We recommend placing your controller behind the front center console panel area removed in step 1.ii.

vi

Once the surface is clean and dry, stick your controller to your chosen location and let the tape cure for 24 hours before riding. [SEE FIGURE 15B]

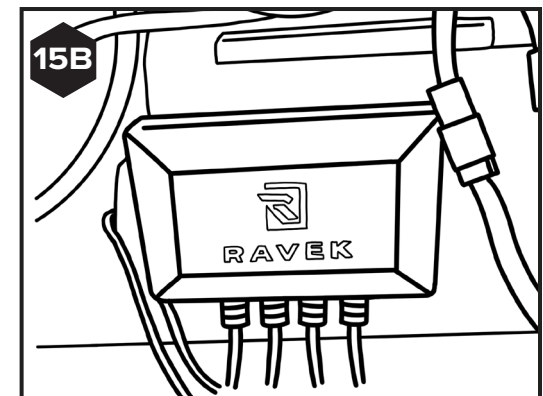

vii

Reverse steps 1.i - 1.vii to reinstall all of your Maverick's body panels and parts that were previously removed.



RAVEK
BUILT FOR MORE

WHY RAVEK

Stock UTVs don't come with enough storage, lighting, comfort, and protection. That's why we started RAVEK.

We live to design, manufacture, and test innovative SxS upgrades that elevate the riding experience. Here's what you can expect from us:

- Durable products built to last (100% lifetime guarantee)
- UTV upgrades thoughtfully designed & tested by riders
- Outstanding installation support (videos & USA customer service)
- Constant flow of epic riding content (check out our social media)

We're confident your RAVEK product will earn its place on your machine. Please call or e-mail us if we can help.

- Harry & Ricky (Brothers & Owners)

MESSAGE FROM THE DESIGNER

All UTVs come without turn signals, and even though you can ride them on the road, people need to make hand signals to indicate to other riders that you are making a turn! Not only is it tiring, but not safe!

That is why I created this kit: you can easily install a turn signal kit to your UTV, add some personality to your ride, and make your ride safe at any time of the day.